


## VACUUM SYSTEM

Engine: RT.

- 1 = Differential pressure switch
- 2 = EGR valve  
(automatic transmission only)
- 3 = Intake manifold
- 4 = Idle actuator
- 5 = Ignition-distributor advance unit
- 6 = Thermo-valve
- 7 = Thermo-valve, automatic  
transmission only
- 8 = Crankcase breather
- 9 = Warm-up regulator
- 10 = Cylinder head

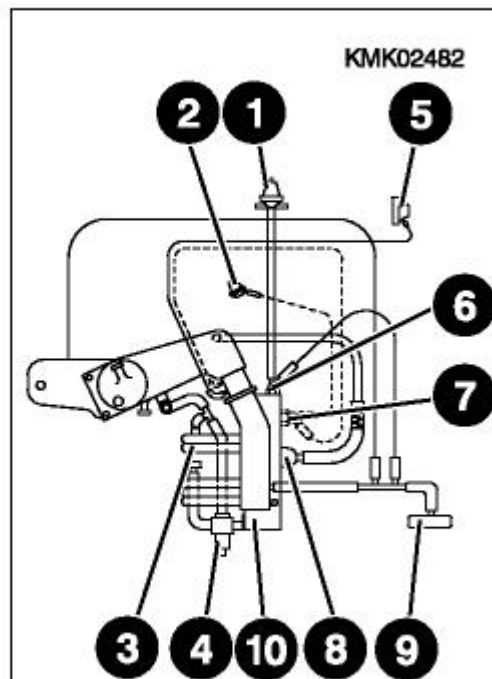

### INSTALLATION POSITION OF COMPONENTS

Arrangement of components on engine:  
Applicable here are all data and illustrations from the basic instructions valid for these brief instructions (see directory KFZ 00...).

As regards the in-tank electric fuel pump, the applicable data, pictures and instructions are those in the basic instructions for vehicles up to model year 1987.

### INSTALLATION POSITION OF COMPONENTS

The pump unit was modified as of model year 1988 - see next coordinate. When removing and installing, it is to be noted that the pump unit is not inserted in the fuel tank, but rather secured in the manner of a bayonet lock. Before detaching, mark position of pump in top part of housing and of top part in housing. Transfer mark to new pump when replacing pump. Always install pump in same position. Detach pump unit by turning in counter-clockwise direction.