


Cruise control system

Model year 1997


Fuse box

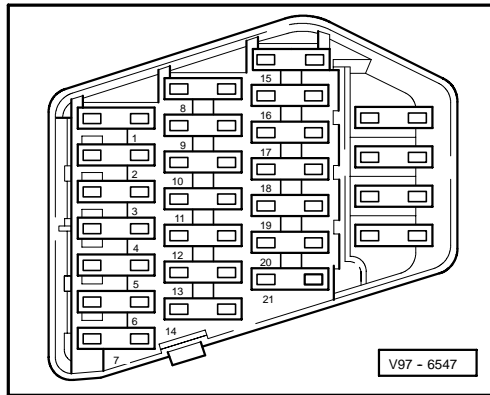

Fuse colours:

- 30 A -green
- 25 A -white
- 20 A -yellow
- 15 A -blue
- 10 A -red
- 5 A -beige


Additional relay carrier I

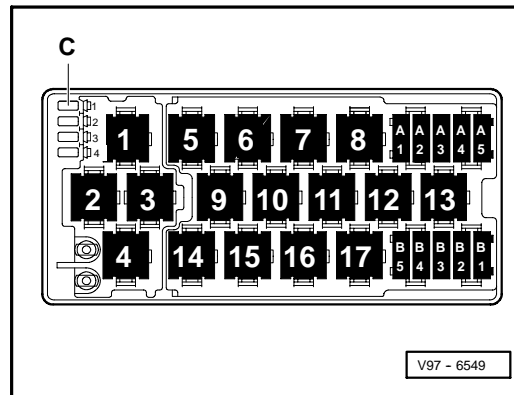


Position of relays:

- 14** - Bulb monitoring device (J123)
- 15** - Bulb monitoring device (J123)

Central electrics - front side

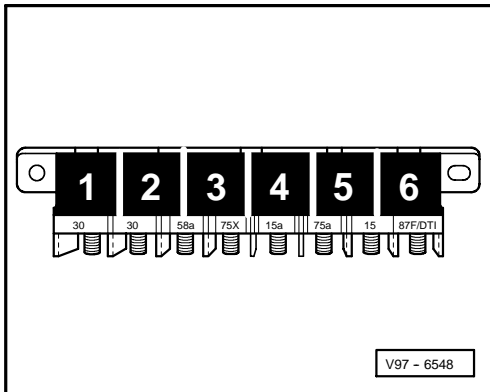

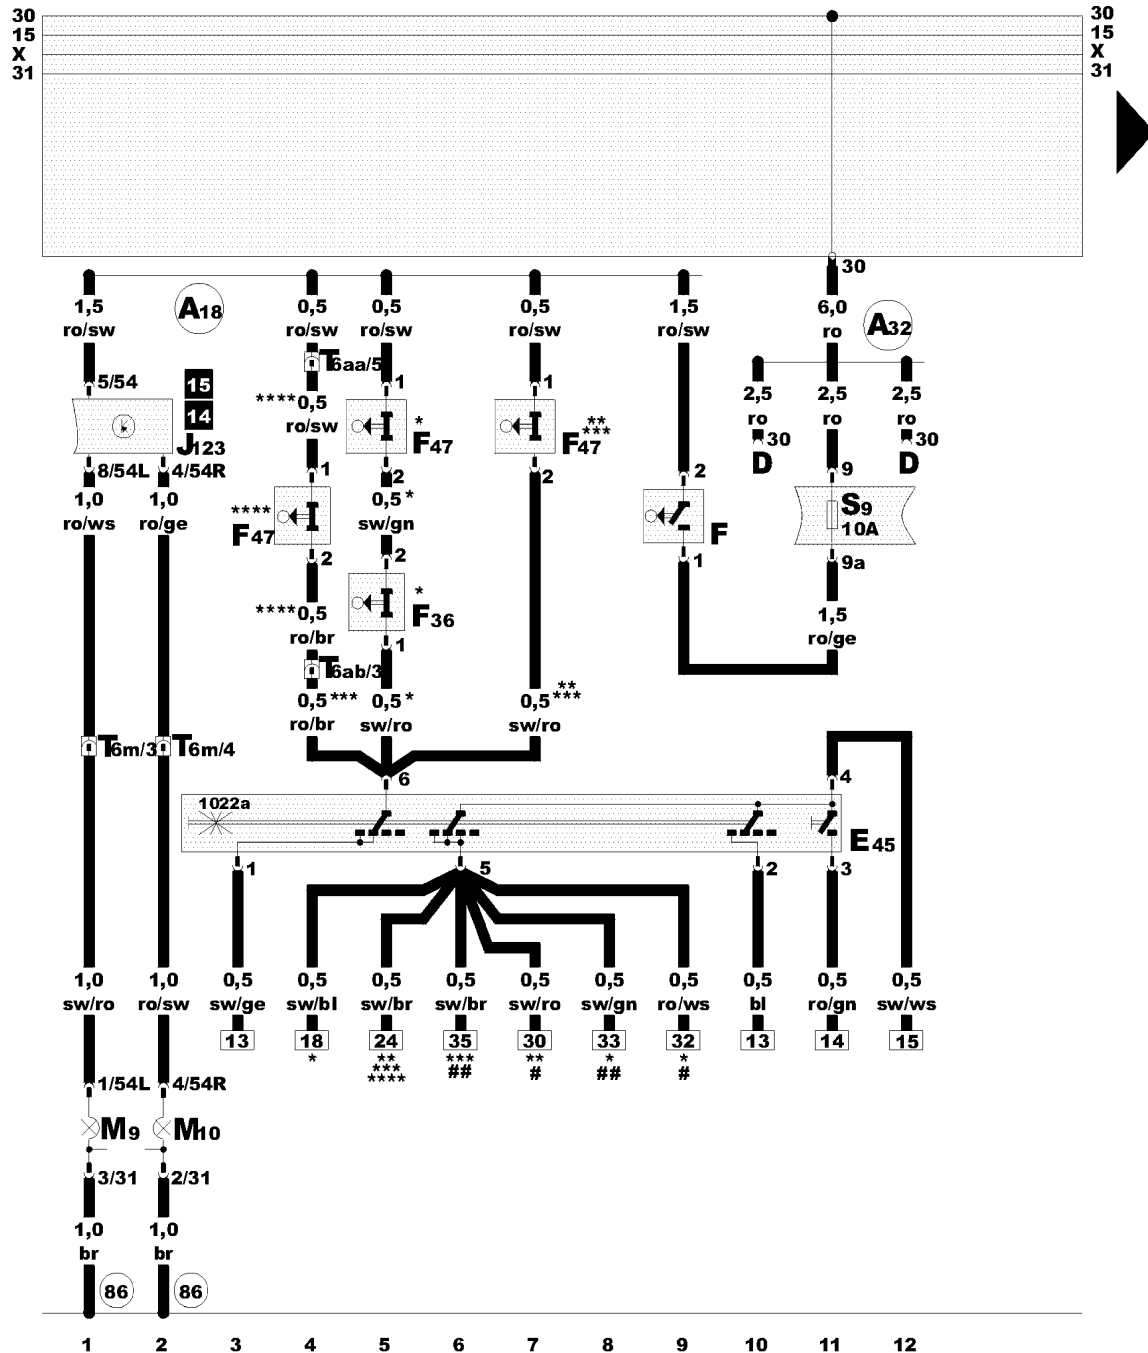


Cruise control system

- D - Ignition/starter switch
- E45 - Cruise control system switch
- F - Brake light switch
- F36 - Clutch pedal switch
- F47 - Cruise control system brake pedal switch
- J123 - Bulb monitoring device, front
- M9 - Brake light bulb, left
- M10 - Brake light bulb, right
- S9 - Fuse in fuse box
- T6m - 6-pin connector, green, connector point 1
- T6aa - 6-pin connector, red, connector point 1
- T6ab - 6-pin connector, yellow, connector point 1

- (86) - Earth connection -1-, in rear wiring harness
- (A18) - Connection (54), in dash panel wiring harness
- (A32) - Positive (+) connection (30), in dash panel wiring harness

- * - Models with manual gearbox
- ** - Models with automatic gearbox 01N
- *** - Models with automatic gearbox 01F, 01K
- **** - Models with automatic gearbox 018
- # - Models with 1.9 l turbo-diesel engine, 66 kW, engine codes 1Z
- ## - Models with 2.5 l turbo-diesel engine, 85 kW, 103 kW, engine codes AAT, AEL

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow

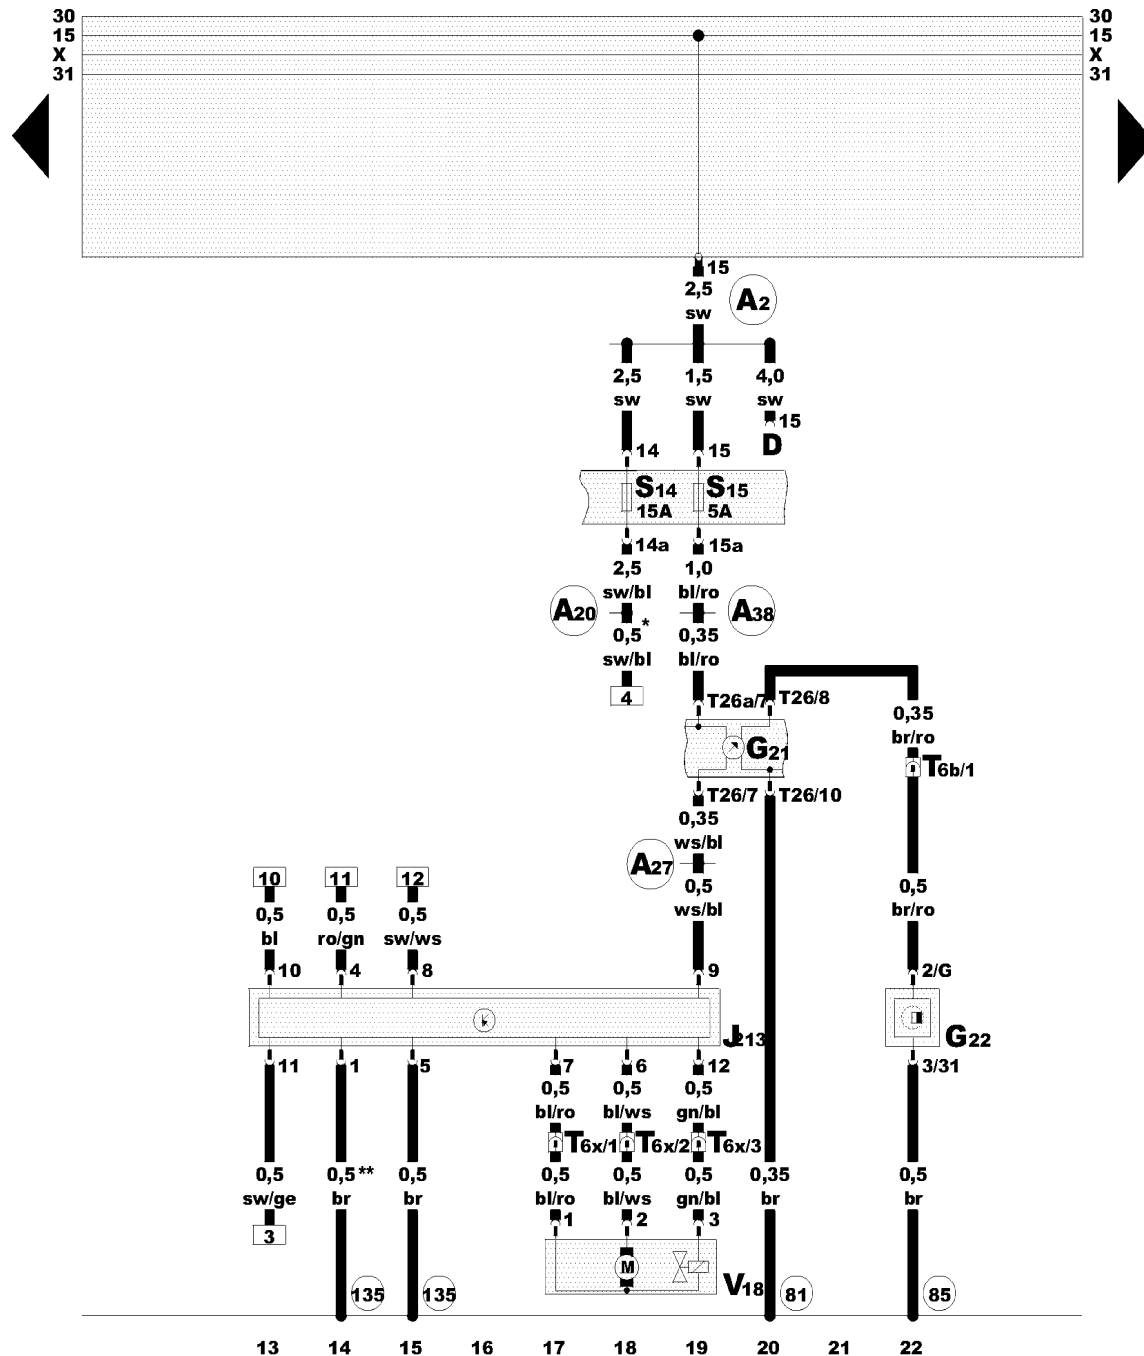


Cruise control system

- D - Ignition/starter switch
 - G21 - Speedometer
 - G22 - Speedometer sender
 - J213 - Cruise control system control unit
 - S14 - Fuse in fuse box
 - S15 - Fuse in fuse box
 - T6b - 6-pin connector, red, connector point 2
 - T6x - 6-pin connector, purple, connector point 1
 - T26 - 26-pin connector, red, on dash panel insert
 - T26a - 26-pin connector, green, on dash panel insert
 - V18 - Vacuum pump for automatic speed control
- (81) - Earth connection -1-, in dash panel wiring harness
 - (85) - Earth connection -1-, in engine compartment wiring harness
 - (135) - Earth connection -2-, in dash panel wiring harness
 - (A2) - Positive (+) connection (15), in dash panel wiring harness
 - (A20) - Positive (+) connection (15a), in dash panel wiring harness
 - (A27) - Connection (speed signal), in dash panel wiring harness
 - (A38) - Positive (+) connection -2- (15a), in dash panel wiring harness

- * - Models with manual gearbox
- ** - Only engines from 110 kW

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow

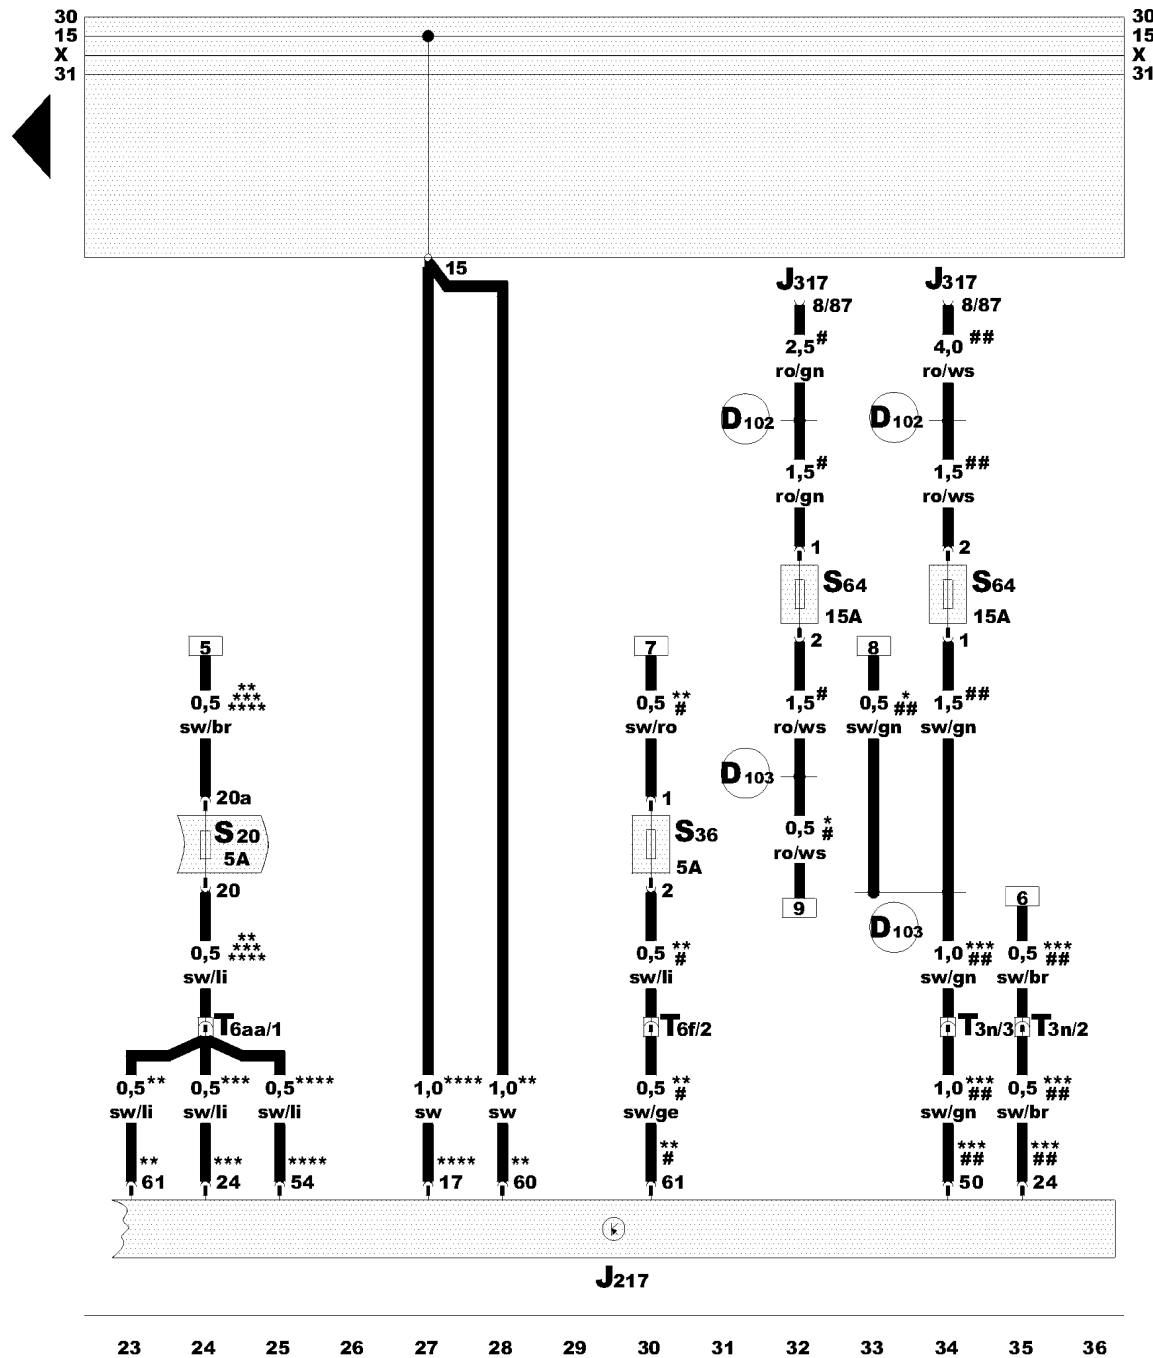

Cruise control system

- J217 - Automatic gearbox control unit
- J317 - Terminal 30 voltage supply relay
- S20 - Fuse in fuse box
- S36 - Speed control safety switch for automatic cruise control system
- S64 - Valves fuse
- T3n - 3-pin connector, yellow, in electronics box, in front right footwell
- T6f - 6-pin connector, yellow, in electronics box, in front right footwell
- T6aa - 6-pin connector, red, connector point 1

- (D102) - Connection -2-, in engine compartment wiring harness
- (D103) - Connection -3-, in engine compartment wiring harness

- * - Models with manual gearbox
- ** - Models with automatic gearbox 01N
- *** - Models with automatic gearbox 01F, 01K
- **** - Models with automatic gearbox 018
- # - Models with 1.9 l turbo-diesel engine, 66 kW, engine codes 1Z
- ## - Models with 2.5 l turbo-diesel engine, 85 kW, 103 kW, engine codes AAT, AEL

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow

23 24 25 26 27 28 29 30 31 32 33 34 35 36

97-17781