


Removing and installing tailgate trim

1 - Lower tailgate trim

- ◆ Removing
 - Unscrew bolt -3- (1x).
 - Unscrew bolt behind hazard warning triangle → Fig.
 - Pull lower tailgate trim -1- slightly off tailgate.
 - Unclip lower tailgate trim -1- at fasteners -6- (8x) (unfastening sequence → Chapter).
 - Press out light -8- from inside.
 - Unplug connector to light -8-.
- ◆ Installing
 - First position lower tailgate trim -1- at rear window and then clip in.
 - Make sure grip moulding -4- is also attached with bolt -3- (detail view A).

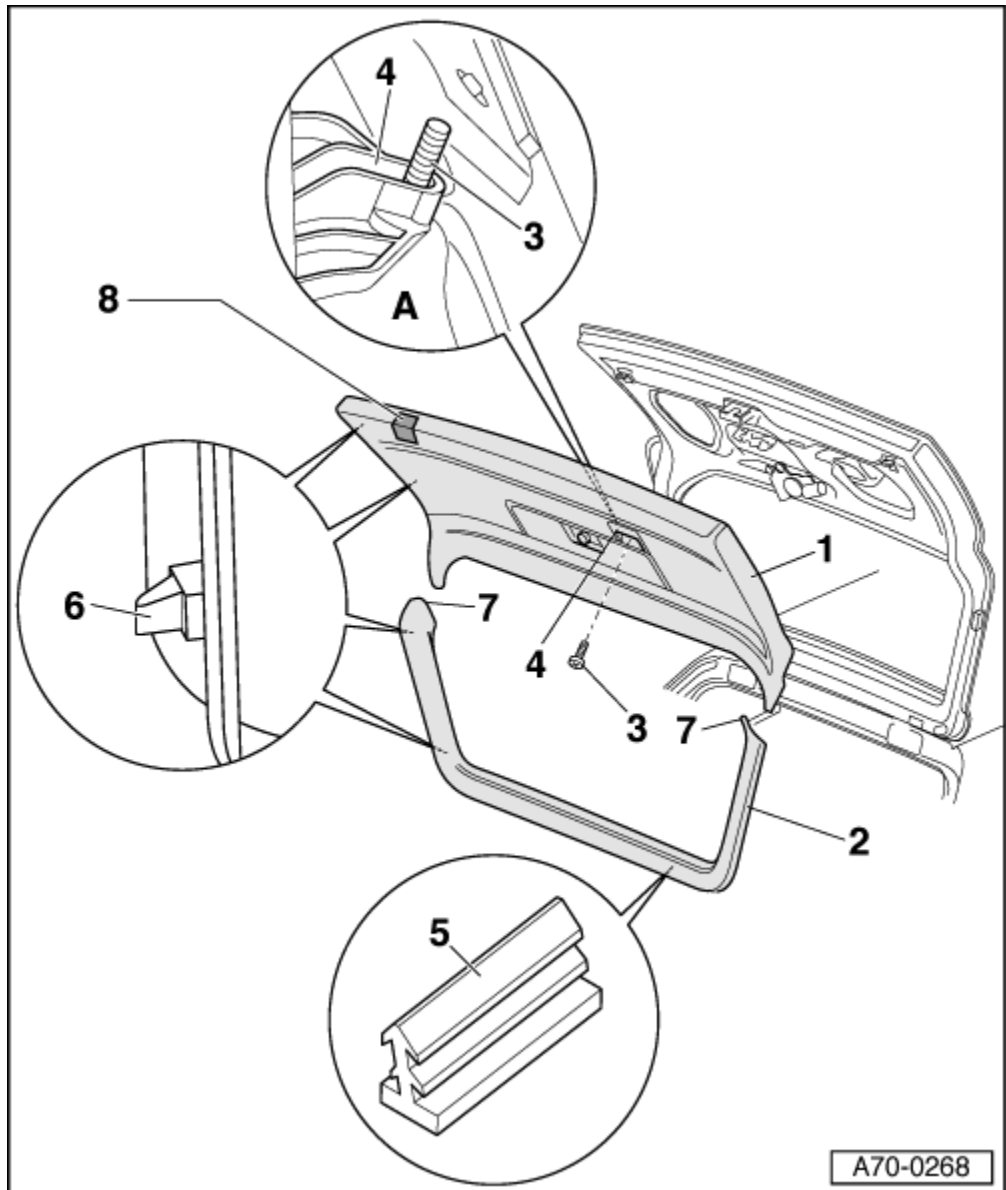

2 - Upper tailgate trim

- Lower tailgate trim -1- removed
- ◆ Removing
 - Unclip retainer tabs -7- on left and right.
 - Unclip upper tailgate trim -2- by jerking slightly at fasteners -6- (7x).
- ◆ Installing
 - Before installing upper tailgate trim -2- make sure rubber buffers -5- (10x) are fitted.
 - First guide upper tailgate trim -2- behind side tailgate flanges.
 - Clip in upper tailgate trim -2- first at top and then at sides.

3 - Bolt (1x)

- Tightening torque 5 Nm

4 - Grip moulding

5 - Rubber buffer (10x)

6 - Fastener

7 - Retainer tab

8 - Light