

Servicing headlamps

Adjusting headlamps

Note:

The specifications and instructions for headlamp adjustment are given in "Maintenance" booklet.

=> Maintenance Manual

→ Adjustment screws on left hand-headlamp.

The arrangement for right headlamp is symmetrically opposite.

- 1 - Height adjustment screw
- 2 - Lateral adjustment screw

- Use Allen key (6 mm) or Phillips screwdriver to adjust appropriate screw.

