

Roof trim strip

Removing and installing front roof trim strip

Important


Never twist or bend the roof trim strip, as this causes permanent visible damage.

1. Cover strip

- 2 off
- Removing:
 - Lever cover strip out of roof trim strip -item [2](#)-
- Installing:
 - Press cover strip into roof trim strip -item [2](#)-
 - Guide lugs of roof trim strip must engage in cover strip.

2. Roof trim strip

- Removing:
 - Removing outer B-pillar trim => Page [66-18](#).
 - Removing A-pillar trim =>Page [66-18](#).
 - Remove cover strips -item [1](#)-.
 - Drill off rivets -item [4](#)- if fitted.
 - Detach roof trim strip at front from roof and pull forwards out of guide pin - A-.
- Second mechanic required for installation
- Spacers - 3- must be fitted

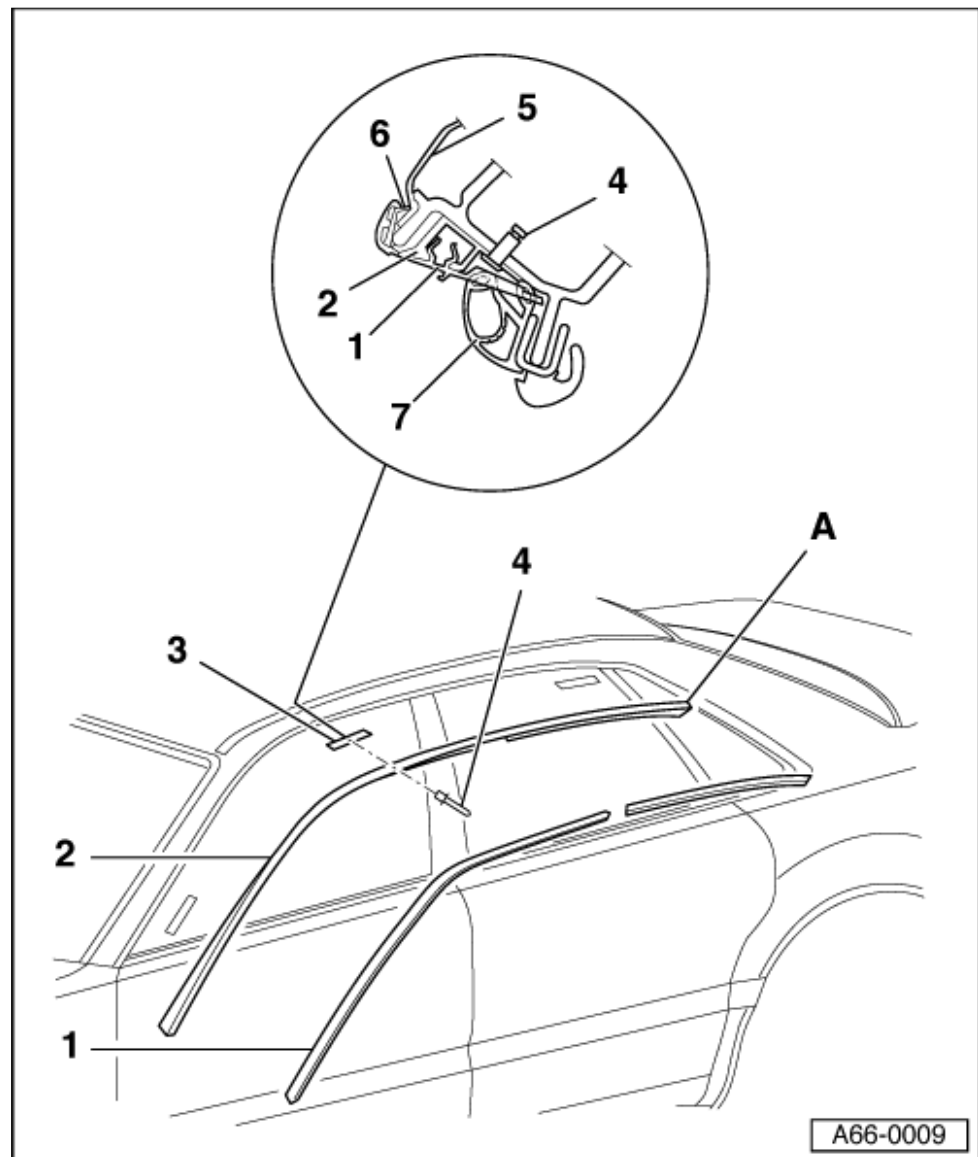

A66-0009

Notes:

- If drilling off the rivets has damaged the paintwork, touch up.

=> Vehicle paintwork

- Take anti-corrosion measures if necessary


=> Binder: "Surface treatment/chemical materials"

3. Shim plate

- 3 off
- No replacement part
- Seal with sealing compound AKD 512 0000 05

4. Blind rivet

- 9 off
- Up to ident. no. 4DT 009 015
- Drill off rivet heads to remove

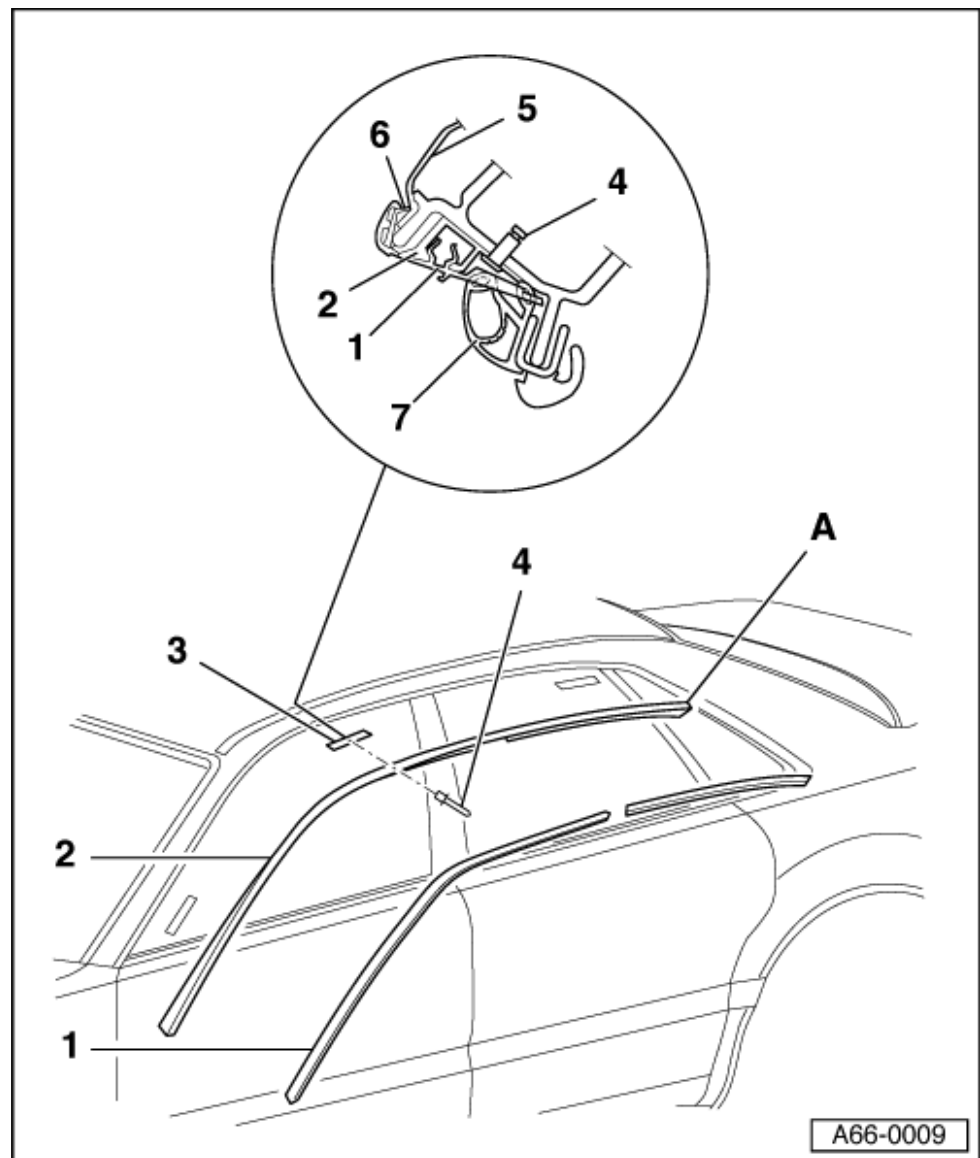

- Always use genuine rivets to avoid contact corrosion:

=> Parts List

- Seal with sealing compound AKD 512 0000 05

1. 4 - Oval-head screw - 1 Nm

- 9 off
- From ident. no. 4DT 009 016
- Seal with sealing

compound
AKD 512
0000 05

- 5. **Roof**
- 6. **Roof seal**
 - Cannot be renewed separately
- 7. **Door inner seal**

