



ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = purple  
 ge = yellow  
 or = orange  
 rs = pink

Side airbag igniter on driver side and on front passenger side, side airbag crash sensor

- G179 - Side airbag crash sensor on driver side
  - G180 - Side airbag crash sensor on front passenger side
  - J234 - Airbag control unit
  - J393 - Convenience system central control unit
  - J526 - Telephone and telematics control unit
  - N199** - Side airbag igniter on driver side
  - N200 - Side airbag igniter on front passenger side
  - T3c - 3-pin connector, yellow, interior near driver seat
  - T3d - 3-pin connector, black, interior near front passenger seat
  - T12i - 12-pin connector, black, on convenience system central control unit (used to be connector 3)
  - T17d - 17-pin connector, red, coupling station on electronics box, plenum chamber
  - 109 - Earth connection, in airbag wiring harness
  - 312 - Earth connection 2, in airbag wiring harness
  - A125 - Connection (crash signal), in dash panel wiring harness
- \* - □ Applicable engine Current Flow Diagram  
 \*\* - For models with seat adjustment, □ applicable Current Flow Diagram  
 \*\*\* - □ Applicable Current Flow Diagram: telematics  
 / \ - Short circuit bridge becomes effective when connector is unplugged

97-59680