


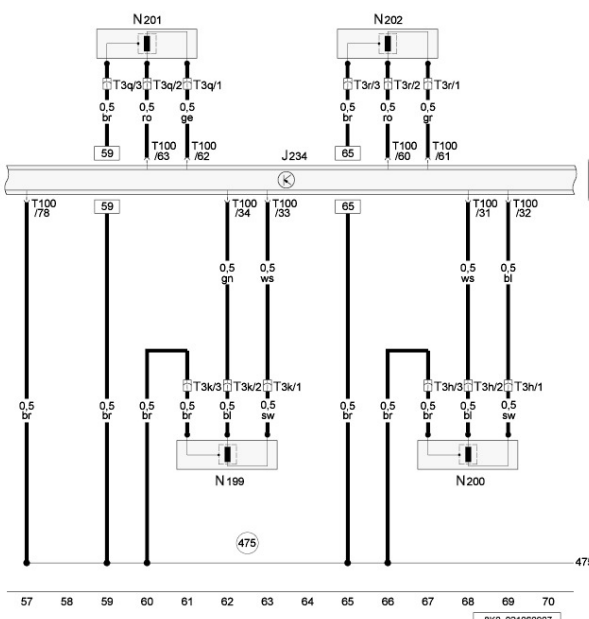

- Side airbag**
- J234 - Airbag control unit
 - N199 - Side airbag igniter on driver side
 - N200 - Side airbag igniter on front passenger side
 - N201 - Rear side airbag igniter on driver side
 - N202 - Rear side airbag igniter on front passenger side
 - T3h - 3-pin connector, yellow, coupling station seat wiring, front passenger seat
 - T3k - 3-pin connector, yellow, coupling station seat wiring, driver seat
 - T3q - 3-pin connector, yellow, under driver side rear seat
 - T3r - 3-pin connector, yellow, under front passenger side rear seat
 - T100 - 100-pin connector, yellow
 - 475 - Earth connection (airbag) in main wiring harness



- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- ll = purple
- ge = yellow
- or = orange
- rs = pink