

## Removing and installing rear lid trim (top)

### 1 - Bolts (2x)

- Tightening torque: 1.5 Nm

### 2 - Rear lid trim (top)

- t Removing:
  - Remove rear lid trim (bottom) → Item.
  - Unscrew bolts -1- (2x).
  - Press spring clips off rear lid at side edges of trim (4x).
  - Detach spring clips -3- from rear lid at top of trim (4x).

- t Installing:
  - Install in reverse order of removal. Observe the following:

- Before installing rear lid trim (top) -2- make sure rubber buffers -4- (8x) are fitted.
- First guide rear lid trim (top) behind side window frames of rear lid.
- Clip trim on at the top first and then at the side.

### 3 - Spring clips (8x)

### 4 - Rubber buffers (8x)

