



Removing bumper cover


- Unscrew bolts from underside of cover -arrows-.

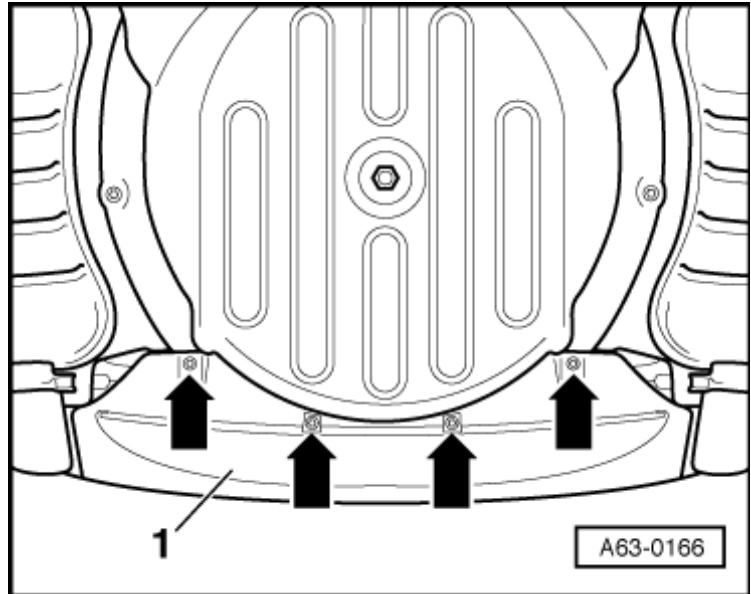

- Unscrew hexagon bolts -arrows- from wheel housing liner -1-.

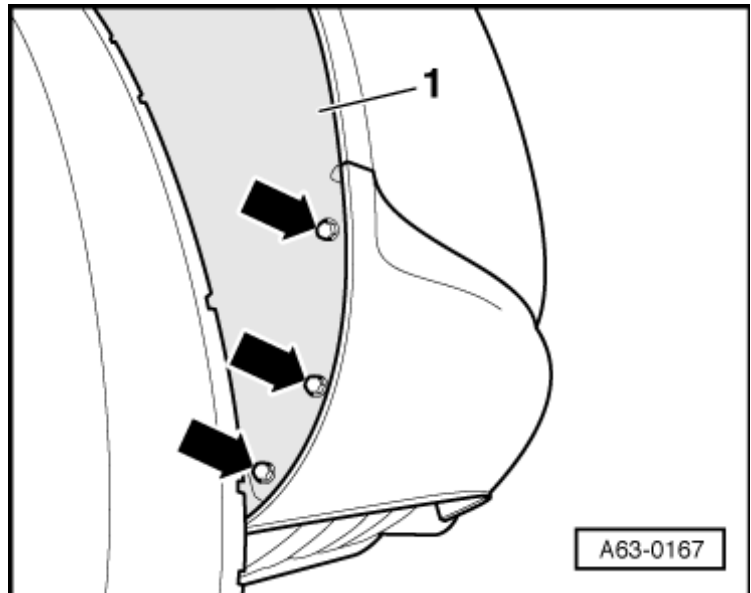

- A further nut -1- on each side has to be unscrewed on inside of side panel.
- Release fastening strip in side panels (left and right) → [Chapter](#) and pull cover slightly off vehicle to rear.
- Right fastening strip is released by turning clockwise; left strip by turning anti-clockwise.
- Unplug all connectors to electrical components and detach cover.

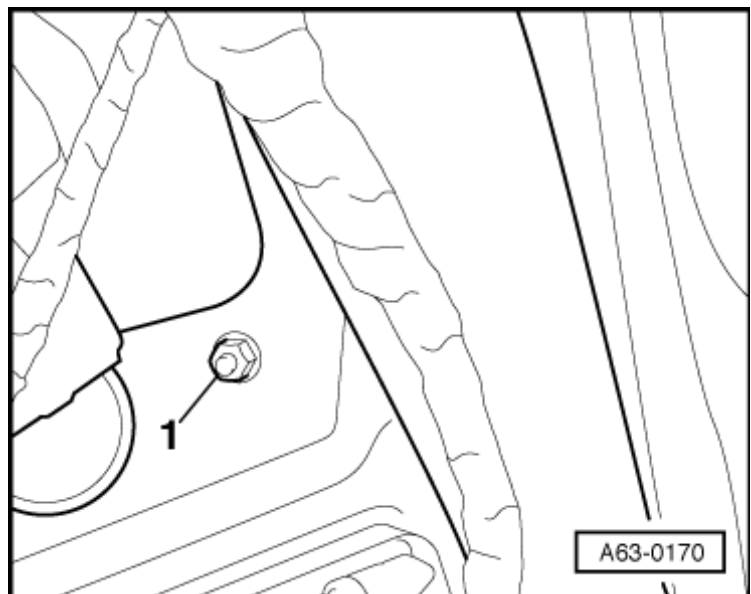

WARNING

Always ensure compliance with torque of 1 Nm on installation.

Worm gear of fastening strip will otherwise be damaged, thus considerably impeding bumper removal.

Cover grommets

Before fitting cover, check that round – grommets -1- and oval grommets -2- have been pressed into side panel as shown.

