



Fig. 1 Display: Settings

Applies to vehicles: with adaptive air suspension

The desired settings can be selected using the MMI.

Important: The ignition must be switched on.

- Select: Function selector button **CAR** > **adaptive air suspension**.

If the arrow -1- in the illustration Fig. 1 is highlighted in white, the vehicle will move upwards.

If the arrow -2- is highlighted in white, the vehicle will move downwards.

The arrows will remain lit until the vehicle has stopped moving up or down. The time required for adjusting the suspension level varies according to the current driving situation.

Please note that certain suspension settings are not available in some situations. For example, the lift setting cannot be selected if the speed is above 80 km/h. This setting will then appear *greyed out* in the MMI display to show that it is not active.

For more information on the ride settings please refer to ► [Link](#).