

Adjustment dimensions for front door window frame

1 - Window frame


- If door is adjusted correctly, sealing lip must fit flush with contours of roof frame and pillar -B-, see arrows.

2 - Door window

- Adjust door to achieve dimension -d- = 4 mm in area -c- = 365 mm
- Dimension -d- can be checked with door adjustment template - T40038-.
- Dimension -b- measured from rear edge of door at -B- pillar = 200 mm

3 - Window frame

- Door window -2- must fit into window frame at -B- pillar (dimension -a- = 7.5 mm^{-1mm}).

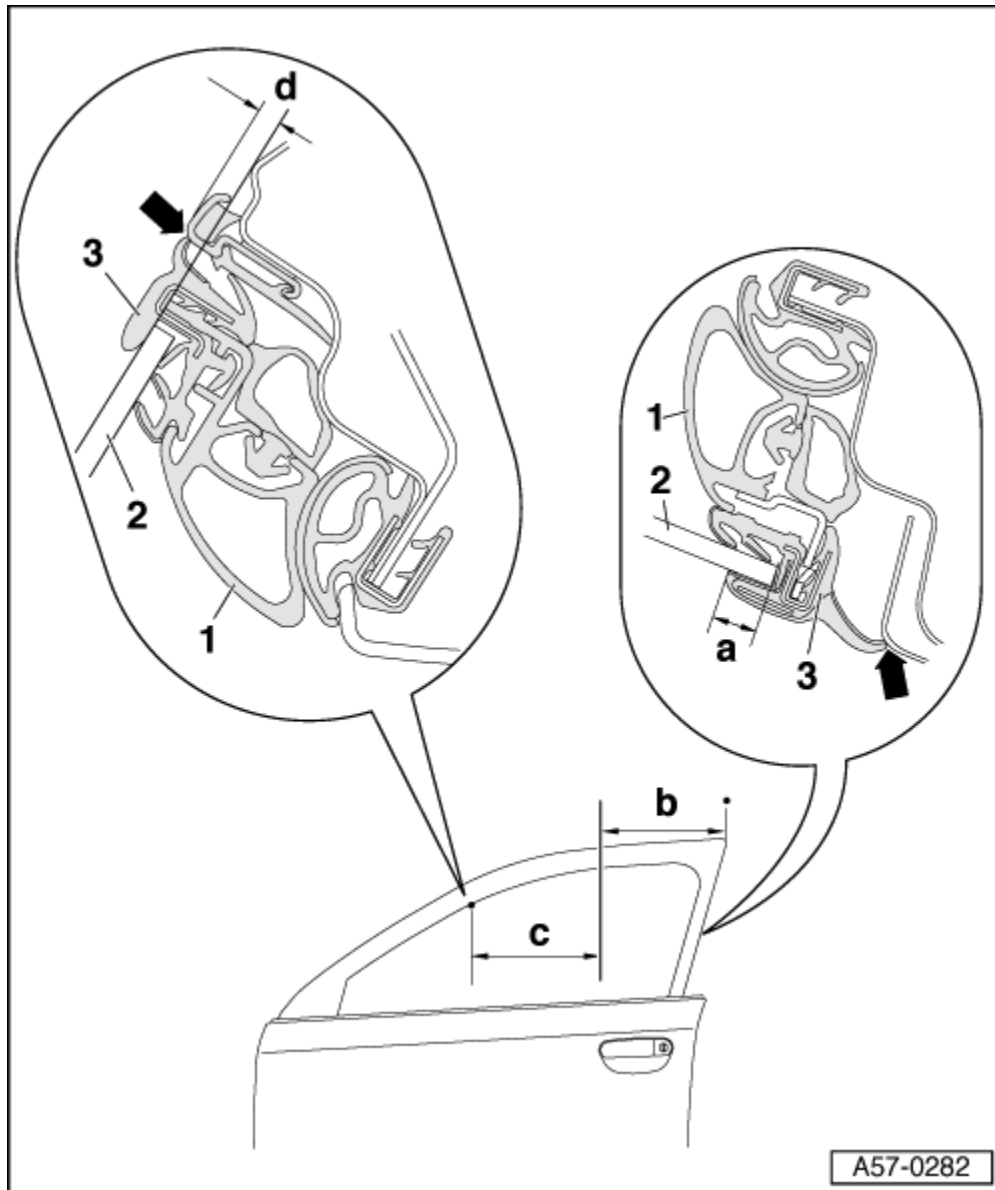

A57-0282