

Audi A4

Current Flow Diagram


No. 42 / 1

Edition 04.2004

Basic equipment - Highline


From model year 2002

Main fuse

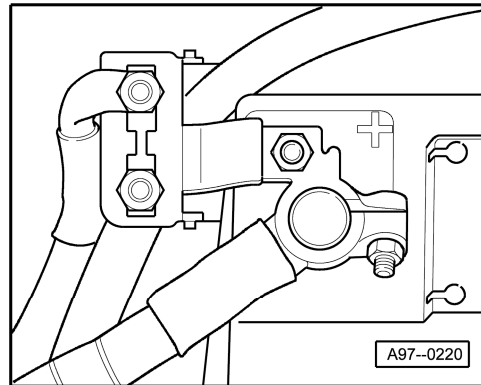

- ◆ On battery

Fuse box

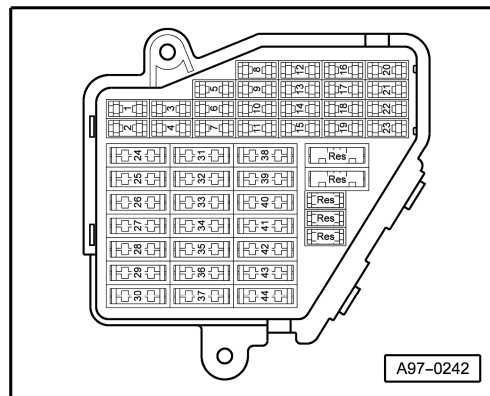

- ◆ Dash panel, driver's side


Fuse colours

30 A - green

25 A - white
20 A - yellow
15 A - blue
10 A - red
7.5 A - brown
5 A - beige


**Note:**

From fuse number 23 upwards the fuses in the fuse box are designated as 223 etc. in the Current Flow Diagram.

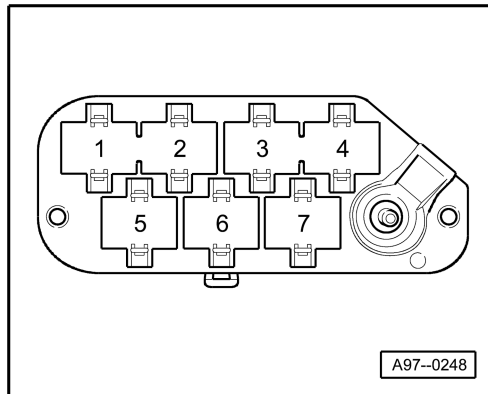Connector point with screw connection


- ◆ In electronics box, plenum chamber
 - 1 - 10-pin connector, black (T10)
 - 2 - 10-pin connector, brown (T10a)
 - 3 - 17-pin connector, red (T17d)
 - 6 - 17-pin connector, white (T17e)

Connector point, A pillar

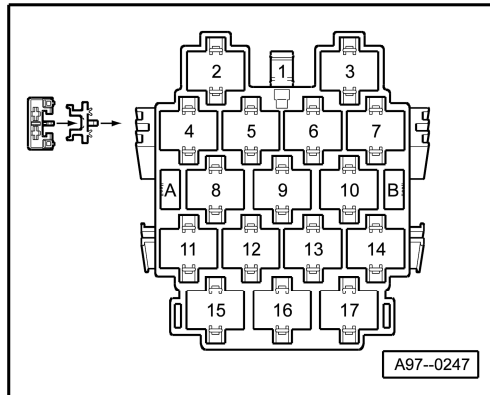


- ◆ On left-hand side, bottom, behind side trim
 - 13 - 10-pin connector, purple (T10c)
 - 15 - 17-pin connector, green (T17b)
 - 16 - 17-pin connector, red (T17a)
 - 17 - 17-pin connector, black (T17)

Connector point, A pillar

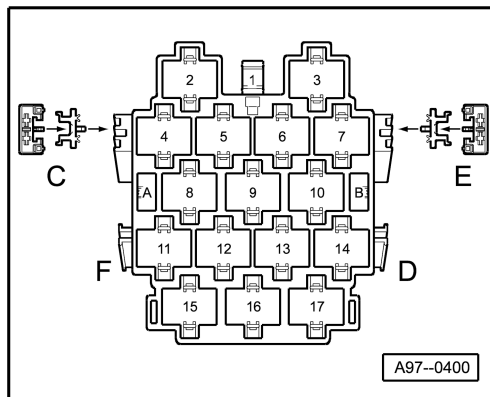


- ◆ On right hand-side, bottom, behind trim
 - 15 - 17-pin connector, red (T17c)

4-point relay carrier with screw connection

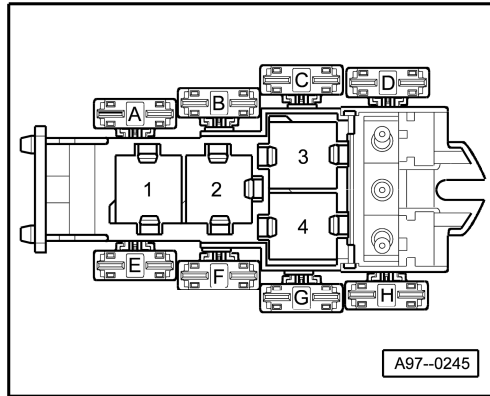

- ◆ Dash panel, driver's side

9-point relay carrier with vehicle voltage control unit


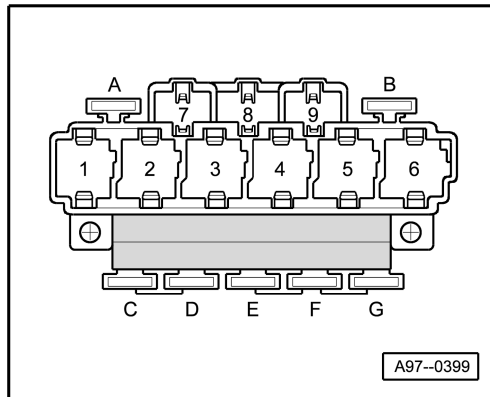


- ◆ Dash panel, driver's side, behind 3-point relay carrier
 - 3 - Dual tone horn relay (J4)
 - 6 - X contact relief relay (J59)

Audi A4

Current Flow Diagram

 
No. 42 / 2

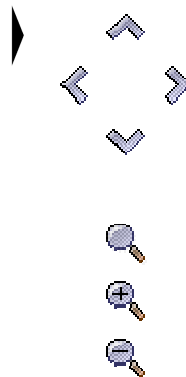

Earth connections

- T4k - 4-pin connector, black, near front bumper
- 3 - Earth strap, engine - body
- 12 - Earth point, in engine compartment, left
- 26 - Earth point, on front apron
- 50 - Earth point, luggage compartment, left
- 78 - Earth point, lower part of right B pillar
- 83 - Earth connection -1-, in front right wiring harness
- 86 - Earth connection -1-, in rear wiring harness
- 179 - Earth connection, in left headlight wiring harness
- 249 - Earth connection -2-, in interior wiring harness
- 345 - Earth connection, in bumper, horn/fog light wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

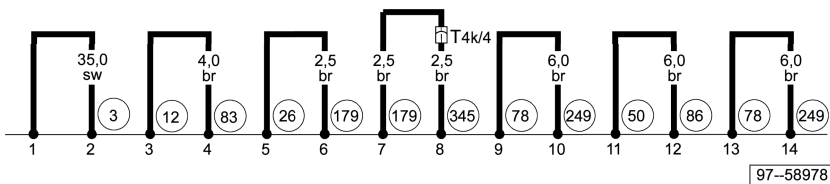


97-58978

Audi A4

Current Flow Diagram


No. 42 / 3

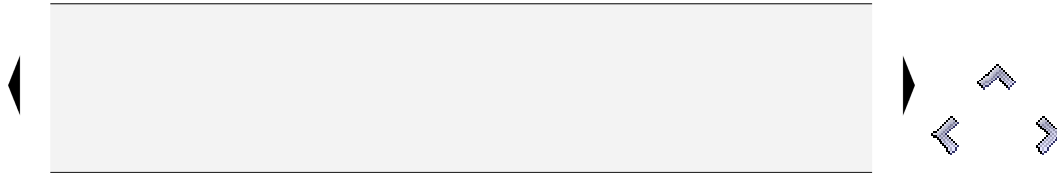

Earth connections

- T10c - 10-pin connector, purple, connector point, A pillar, left
- 32 - Earth point, behind dash panel, left
- 33 - Earth point, behind dash panel, right
- 43 - Earth point, lower part of right A pillar
- 44 - Earth point, lower part of left A pillar
- 49 - Earth point, near convenience system central control unit
- 77 - Earth point, lower part of left B pillar
- 81 - Earth connection -1-, in dash panel wiring harness
- 135 - Earth connection -2-, in dash panel wiring harness
- 176 - Earth connection, in right headlight wiring harness
- 238 - Earth connection -1-, in interior wiring harness
- 261 - Earth connection, in heated washer jet wiring harness
- 277 - Earth connection -3-, in interior wiring harness
- * - Phased-in modification

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

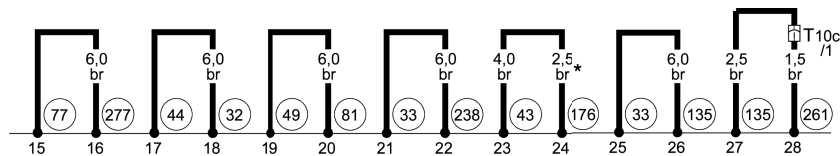


97-58990

Audi A4

Current Flow Diagram

No. 42 / 4

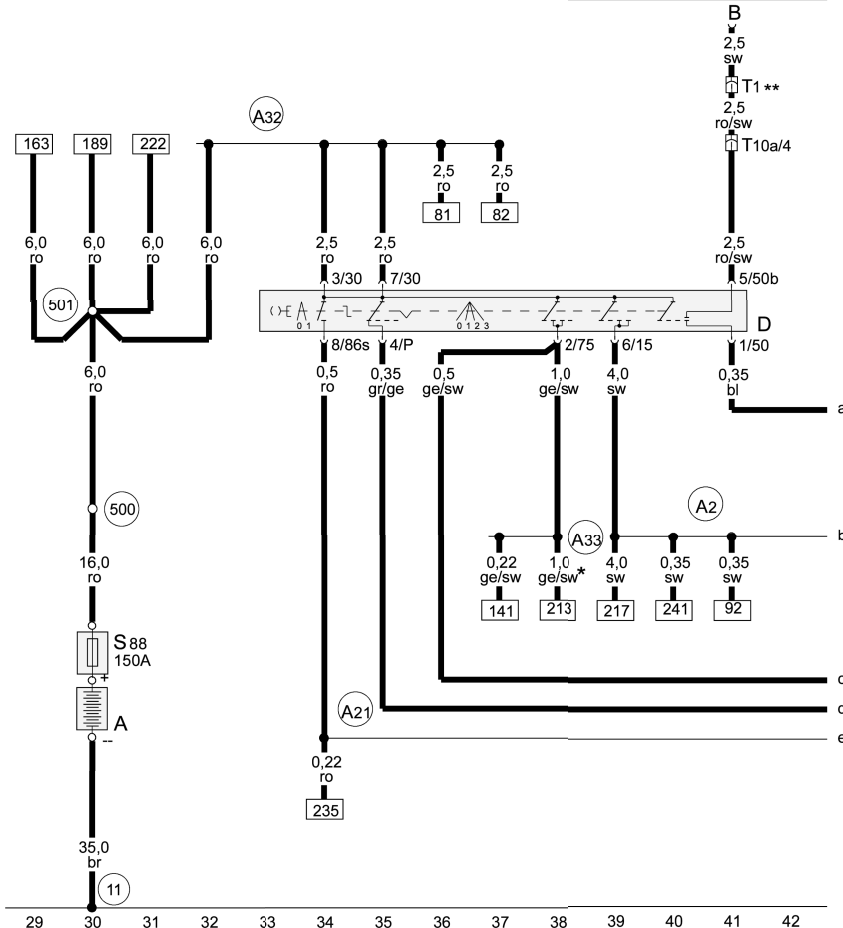

Ignition/starter switch, main fuse

- A - Battery
- B - Starter
- D - Ignition/starter switch
- S88 - Strip fuse (main fuse)
- T1 - Single connector, black, engine compartment, right
- T10a - 10-pin connector, brown, connector point, electronics box, plenum chamber
- 11 - Earth point, in battery box
- 500 - Screw connection -1- (30), on relay plate
- 501 - Screw connection -2- (30), on relay plate
- A2 - Positive (+) connection (15), in dash panel wiring harness
- A21 - Connection (86s), in dash panel wiring harness
- A32 - Positive (+) connection (30), in dash panel wiring harness
- A33 - Connection (75), in dash panel wiring harness
- * - Only applies to models with heated washer jets
- ** - For 1.8 litre and 2.0 litre engine: connector T1d


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink


 
Audi A4

Current Flow Diagram

No. 42 / 5

Steering column electronics control unit, cruise control system

- E45 - Cruise control system switch
- J... - Engine control units
- J527 - Steering column electronics control unit 
- T16a - 16-pin connector, black, on steering column electronics control unit
- T17e - 17-pin connector, white, connector point, electronics box, plenum chamber
- 135 - Earth connection -2-, in dash panel wiring harness
- A2 - Positive (+) connection (15), in dash panel wiring harness
- A21 - Connection (86s), in dash panel wiring harness

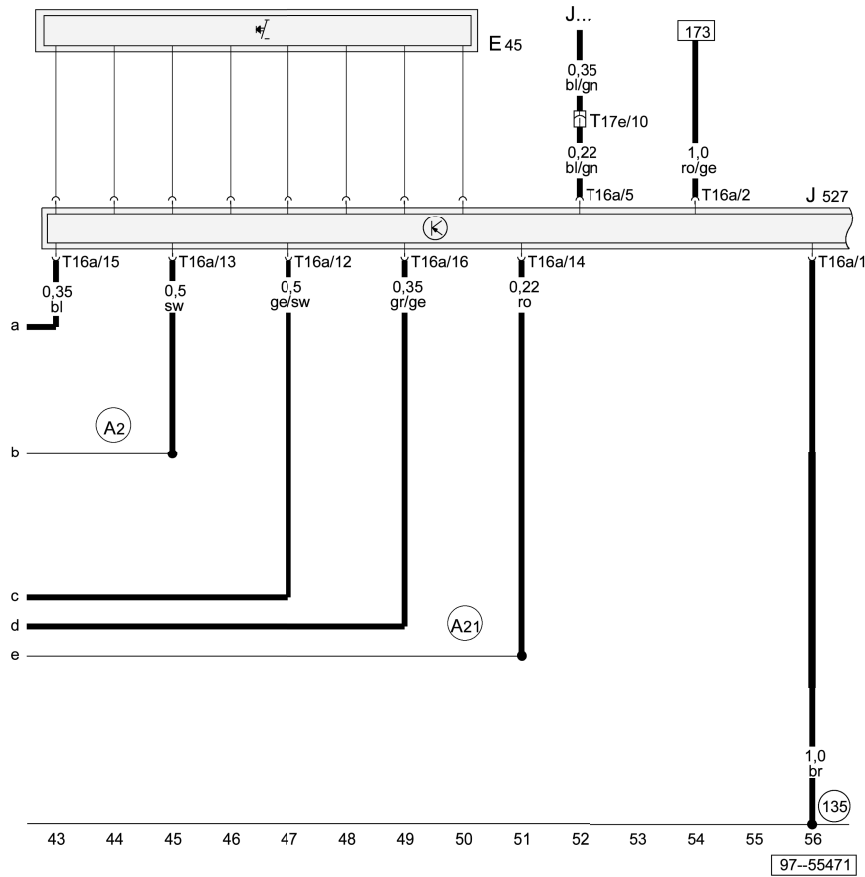


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


Audi A4

Current Flow Diagram

No. 42 / 6

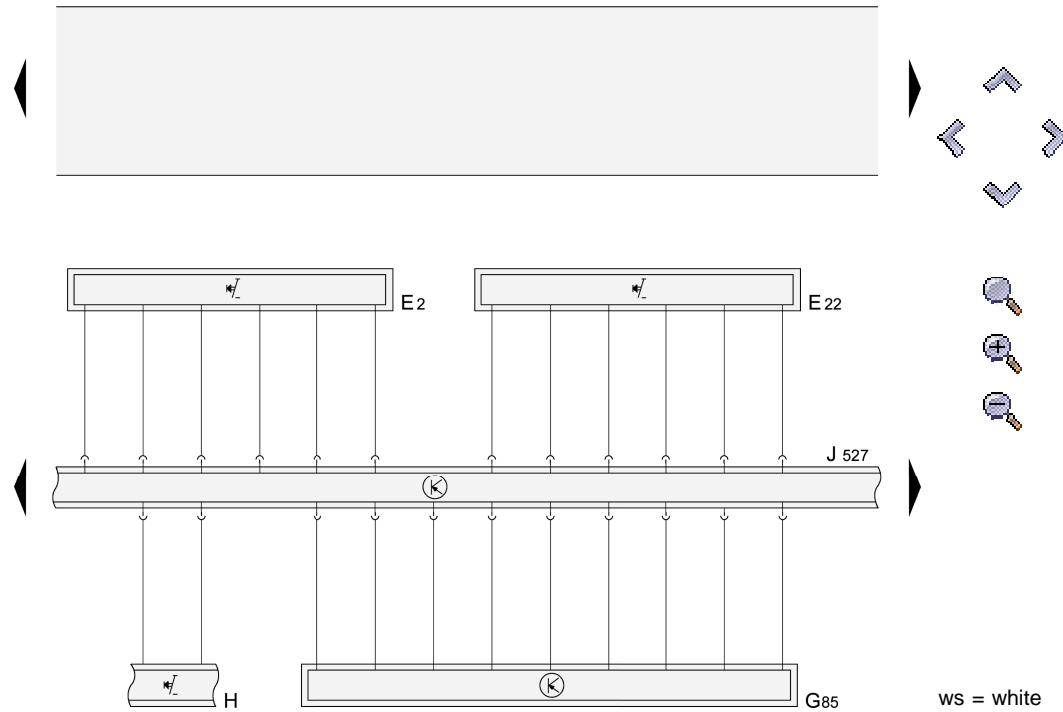

Turn signal switch, intermittent wiper switch, steering angle sender, horn plate, steering column electronics control unit


- E2 - Turn signal switch
- E22 - Intermittent wiper switch
- G85 - Steering angle sender
- H - Horn plate
- J527 - Steering column electronics control unit 

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Audi A4

Current Flow Diagram

No. 42 / 7

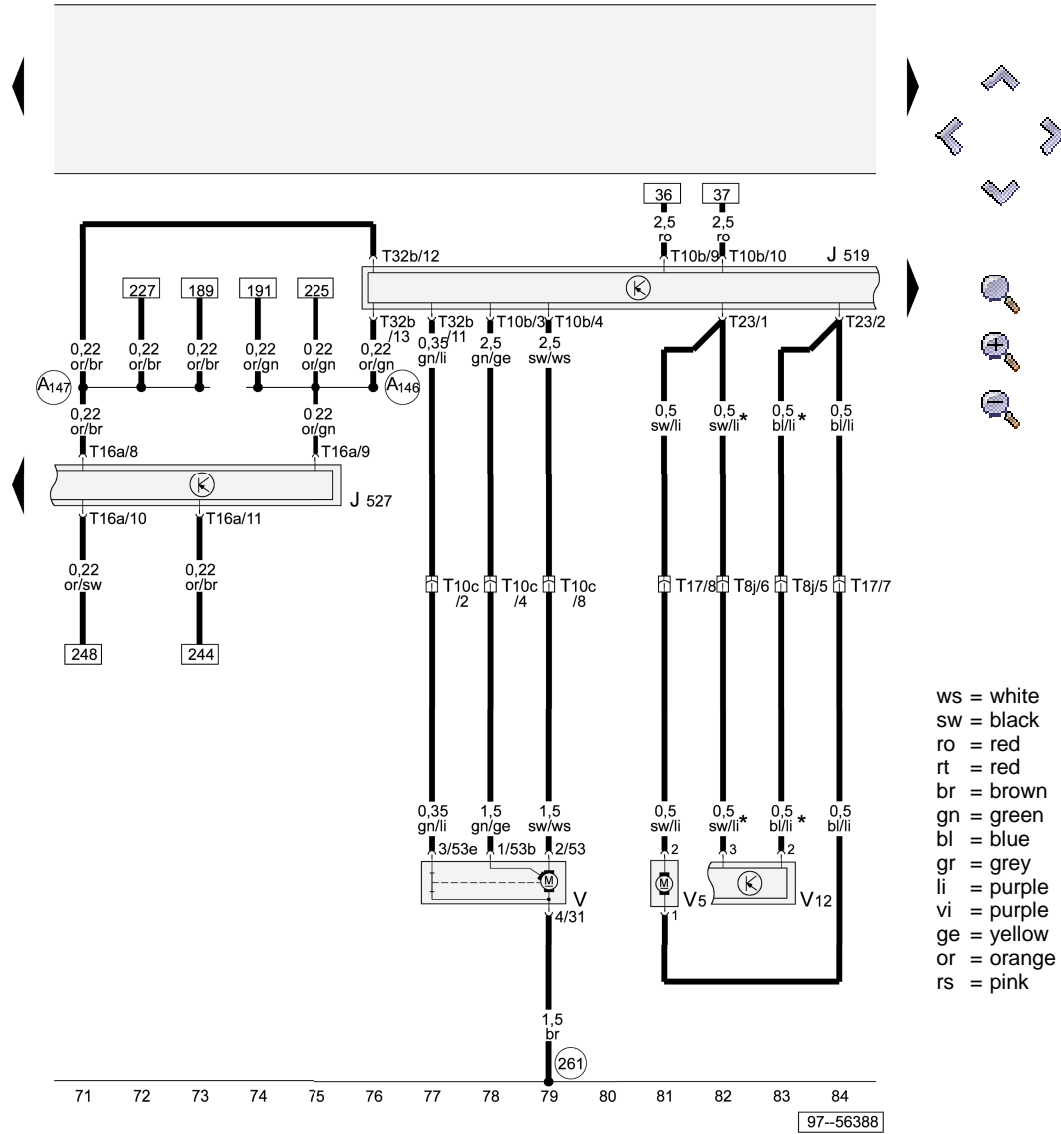

Onboard power supply control unit, steering column electronics control unit, windscreen wiper motor, washer pump, rear window wiper motor


- J519 - Onboard power supply control unit
- J527 - Steering column electronics control unit
- T8j - 8-pin connector, black, behind side trim, rear left
- T10b - 10-pin connector, black, on onboard power supply control unit
- T10c - 10-pin connector, purple, connector point, A pillar, left
- T16a - 16-pin connector, black, on steering column electronics control unit
- T17 - 17-pin connector, black, connector point, A pillar, left
- T23 - 23-pin connector, black, on onboard power supply control unit
- T32b - 32-pin connector, grey, on onboard power supply control unit
- V - Windscreen wiper motor
- V5 - Windscreen washer pump
- V12 - Rear window wiper motor
- 261 - Earth connection, in heated washer jet wiring harness
- A146 - Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 - Connection (convenience CAN bus, low), in dash panel wiring harness
- * - Avant models - see applicable Current Flow Diagram: Avant models, rear

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


Audi A4

Current Flow Diagram

No. 42 / 8

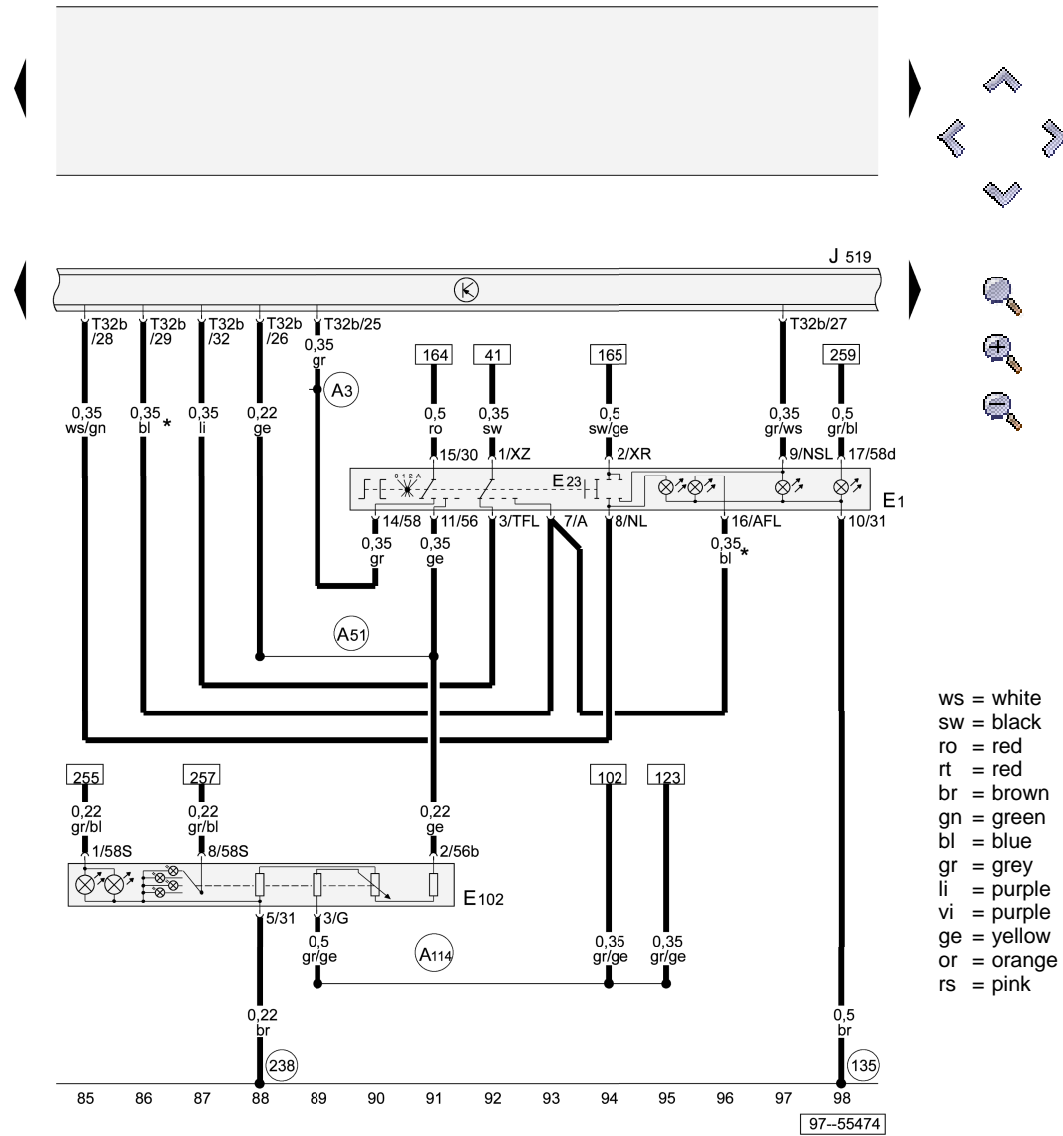

Light switch, headlight range control adjuster, onboard power supply control unit


- E1 - Lighting switch
- E23 - Front and rear fog light switch
- E102 - Headlight range control adjuster
- J519 - Onboard power supply control unit 
- T32b - 32-pin connector, grey, on onboard power supply control unit
- 135 - Earth connection -2-, in dash panel wiring harness
- 238 - Earth connection -1-, in interior wiring harness
- A3 - Positive (+) connection (58), in dash panel wiring harness
- A51 - Connection (56), in dash panel wiring harness
- A114 - Connection (headlight range control), in dash panel wiring harness
- * - Only applies to models with automatic headlight switching with coming home function

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Audi A4

Current Flow Diagram

No. 42 / 9

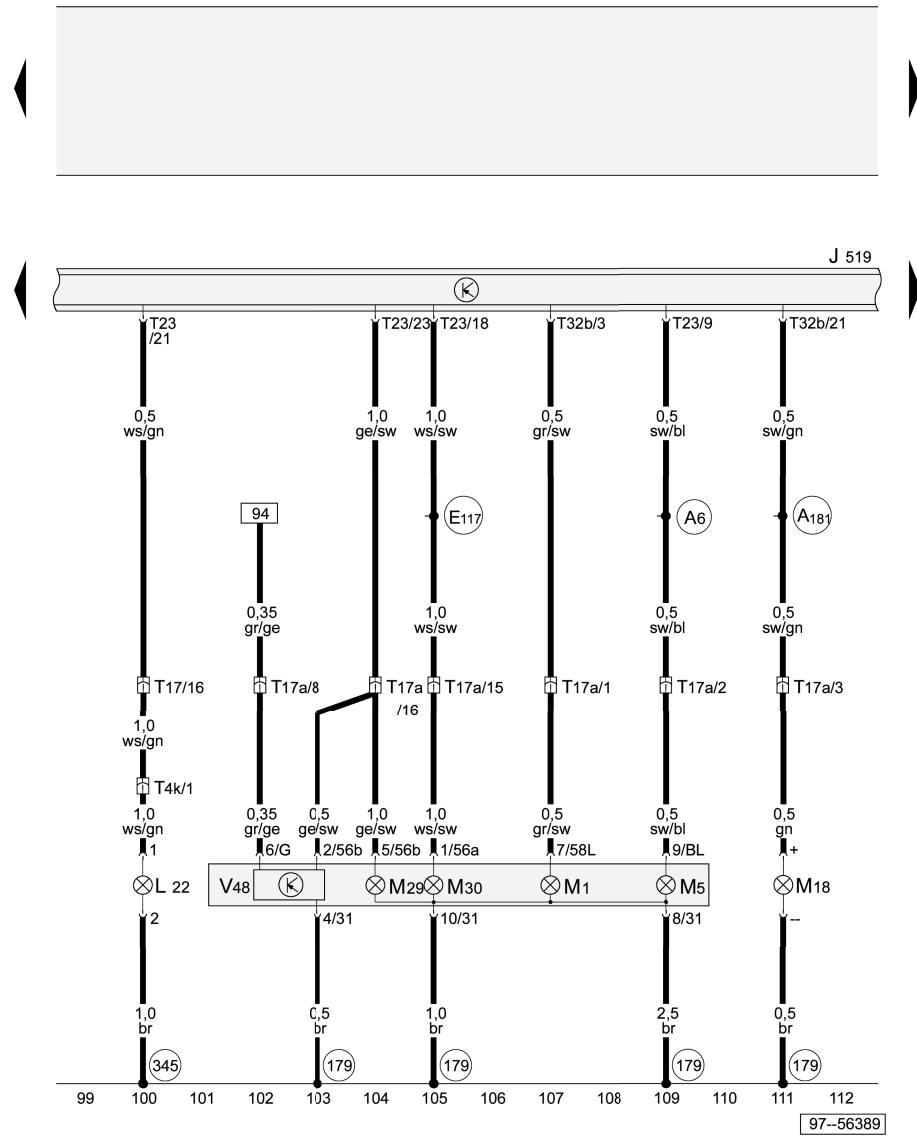

Left headlight, left fog light


- J519 - Onboard power supply control unit
- L22 - Fog light bulb, left
- M1 - Side light bulb, left
- M5 - Turn signal bulb, front left
- M18 - Side turn signal bulb, left
- M29 - Dipped beam bulb, left
- M30 - Main beam bulb, left
- T4k - 4-pin connector, black, near front bumper
- T17 - 17-pin connector, black, connector point, A pillar, left
- T17a - 17-pin connector, red, connector point, A pillar, left
- T23 - 23-pin connector, black, on onboard power supply control unit
- T32b - 32-pin connector, grey, on onboard power supply control unit
- V48 - Headlight range control motor, left
- 179 - Earth connection, in left headlight wiring harness
- 345 - Earth connection, in bumper, horn/fog light wiring harness
- A6 - Positive (+) connection (left turn signal), in dash panel wiring harness
- A181 - Positive (+) connection -2- (left turn signal), in dash panel wiring harness
- E117 - Connection (56a, left), in dash panel wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Audi A4

Current Flow Diagram

No. 42 / 10

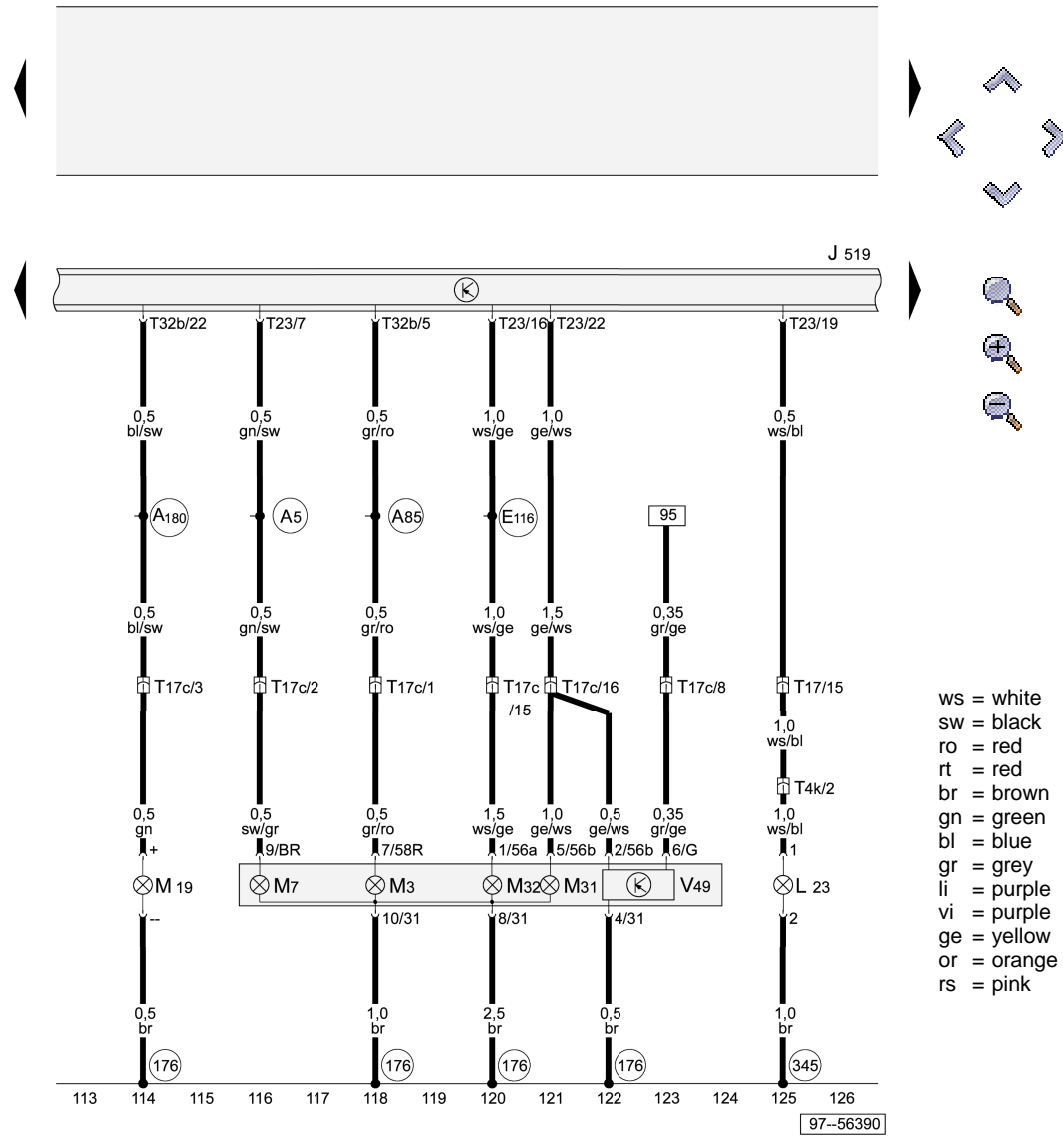

Right headlight, right fog light


- J519 - Onboard power supply control unit
- L23 - Fog light bulb, right
- M3 - Side light bulb, right
- M7 - Turn signal bulb, front right
- M19 - Side turn signal bulb, right
- M31 - Dipped beam bulb, right
- M32 - Main beam bulb, right
- T4k - 4-pin connector, black, near front bumper
- T17 - 17-pin connector, black, connector point, A pillar, left
- T17c - 17-pin connector, red, connector point, A pillar, right
- T23 - 23-pin connector, black, on onboard power supply control unit
- T32b - 32-pin connector, grey, on onboard power supply control unit
- V49 - Headlight range control motor, right
- 176 - Earth connection, in right headlight wiring harness
- 345 - Earth connection, in bumper, horn/fog light wiring harness
- A5 - Positive (+) connection (right turn signal), in dash panel wiring harness
- A85 - Connection (58R), in dash panel wiring harness
- A180 - Positive (+) connection -2- (right turn signal), in dash panel wiring harness
- E116 - Connection (56a, right), in dash panel wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Audi A4

Current Flow Diagram

No. 42 / 11

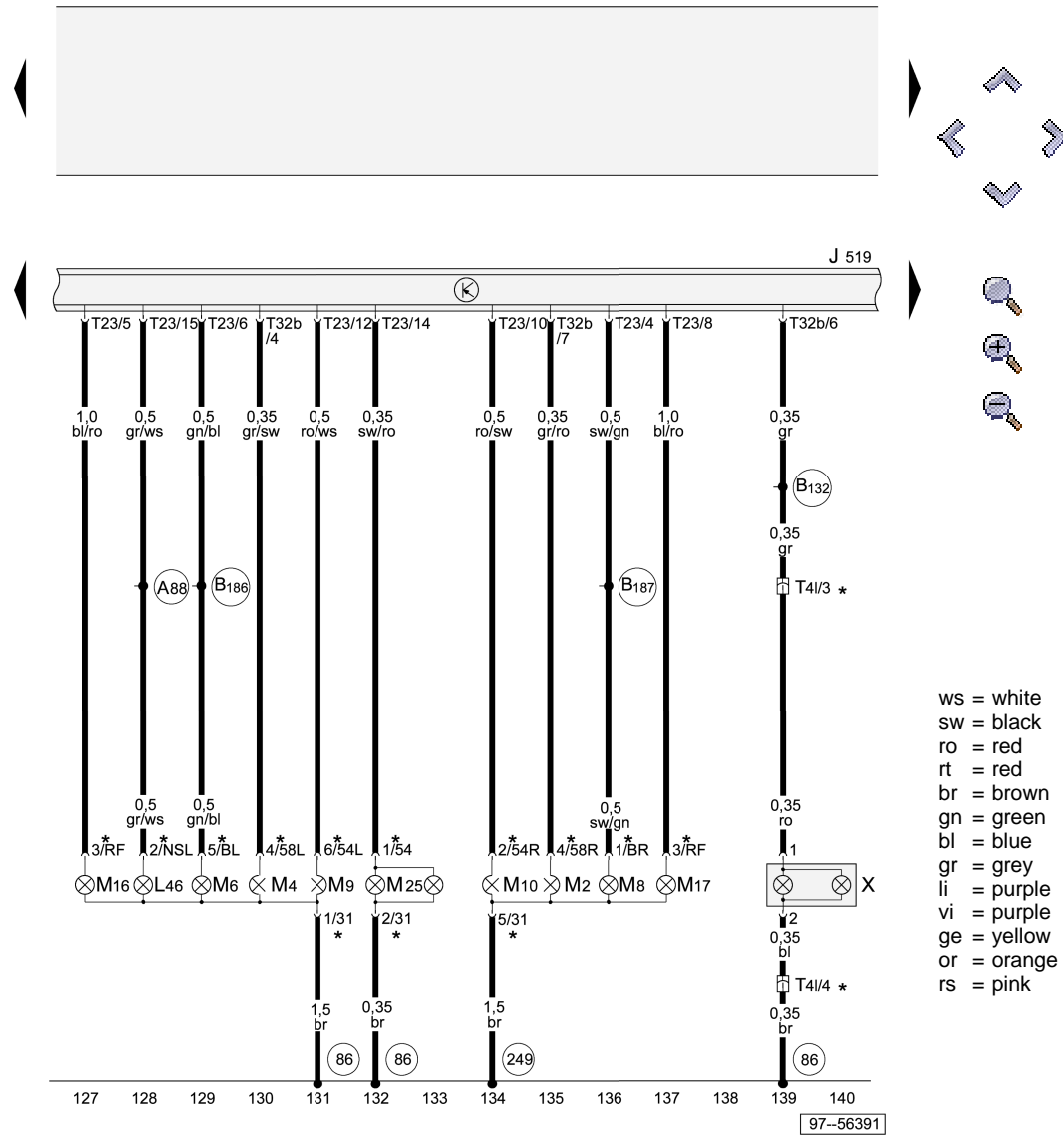


Tail lights

- J519 - Onboard power supply control unit
- L46 - Rear fog light bulb, left
- M2 - Tail light bulb, right
- M4 - Tail light bulb, left
- M6 - Turn signal bulb, rear left
- M8 - Turn signal bulb, rear right
- M9 - Brake light bulb, left
- M10 - Brake light bulb, right
- M16 - Reversing light bulb, left
- M17 - Reversing light bulb, right
- M25 - High level brake light bulb
- T4I - 4-pin connector, black, in tailgate/boot lid
- T23 - 23-pin connector, black, on onboard power supply control unit
- T32b - 32-pin connector, grey, on onboard power supply control unit
- X - Number plate light
- 86 - Earth connection -1-, in rear wiring harness
- 249 - Earth connection -2-, in interior wiring harness
- A88 - Connection (rear fog light), in dash panel wiring harness
- B132 - Connection (number plate light), in interior wiring harness
- B186 - Connection -2- (BL (turn signal, left)), in interior wiring harness
- B187 - Connection -2- (BR (turn signal, right)), in interior wiring harness
- * - Avant models - see applicable Current Flow Diagram: Avant models, rear

Audi A4

Current Flow Diagram

No. 42 / 12

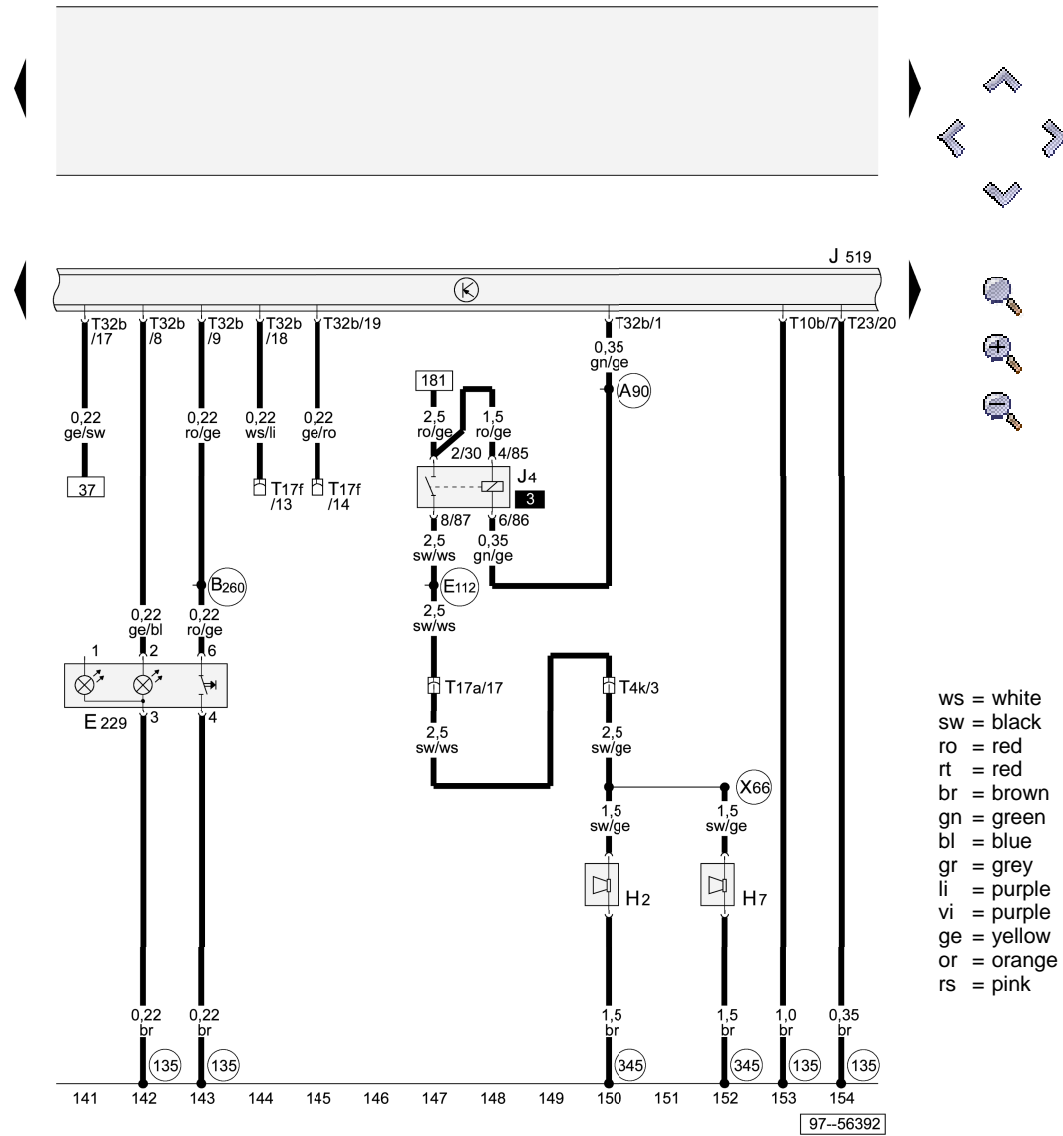

Hazard warning lights button, dual tone horn, onboard power supply control unit


- E229 - Hazard warning lights button
- H2 - High tone horn
- H7 - Low tone horn
- J4 - Dual tone horn relay
- J519 - Onboard power supply control unit
- T4k - 4-pin connector, black, near front bumper
- T10b - 10-pin connector, black, on onboard power supply control unit
- T17a - 17-pin connector, red, connector point, A pillar, left
- T17f - 17-pin connector, orange, connector point, A pillar, left
- T23 - 23-pin connector, black, on onboard power supply control unit
- T32b - 32-pin connector, grey, on onboard power supply control unit
- 135 - Earth connection -2-, in dash panel wiring harness
- 345 - Earth connection, in bumper, horn/fog light wiring harness
- A90 - Connection (dual tone horn), in dash panel wiring harness
- B260 - Connection (hazard warning lights), in interior wiring harness
- E112 - Connection (horn-87h), in dash panel wiring harness
- X66 - Connection (horn), in front bumper wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Audi A4

Current Flow Diagram

No. 42 / 13

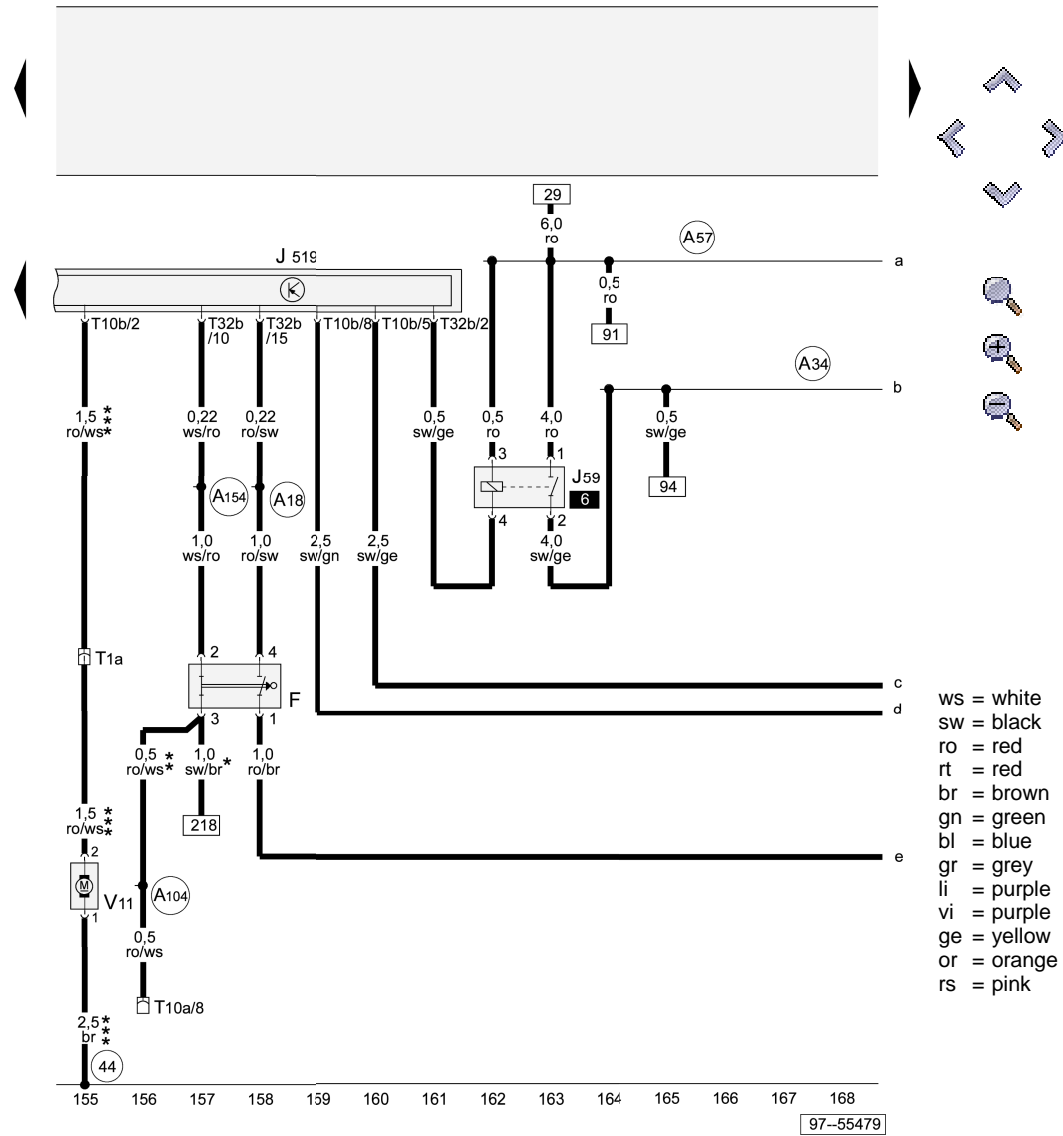

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


Brake light switch, X contact relief relay, headlight washer system pump, onboard power supply control unit

- F - Brake light switch
- J59 - X contact relief relay
- J519 - Onboard power supply control unit
- T1a - Single connector, black, connector point, A pillar, left
- T10a - 10-pin connector, brown, connector point, electronics box, plenum chamber
- T10b - 10-pin connector, black, on onboard power supply control unit
- T32b - 32-pin connector, grey, on onboard power supply control unit
- V11 - Headlight washer system pump
- 44 - Earth point, lower part of left A pillar
- A18 - Connection (54), in dash panel wiring harness
- A34 - Connection (75x), in dash panel wiring harness
- A57 - Positive (+) connection -3- (30), in dash panel wiring harness
- A104 - Positive (+) connection -2- (15), in dash panel wiring harness
- A154 - Connection (brake pedal switch), in dash panel wiring harness
- * - Only applies to models with petrol engine
- ** - Only applies to models with diesel engine
- *** - Protected via fuse S237, only applies to models with headlight washer system

Audi A4

Current Flow Diagram

No. 42 / 14

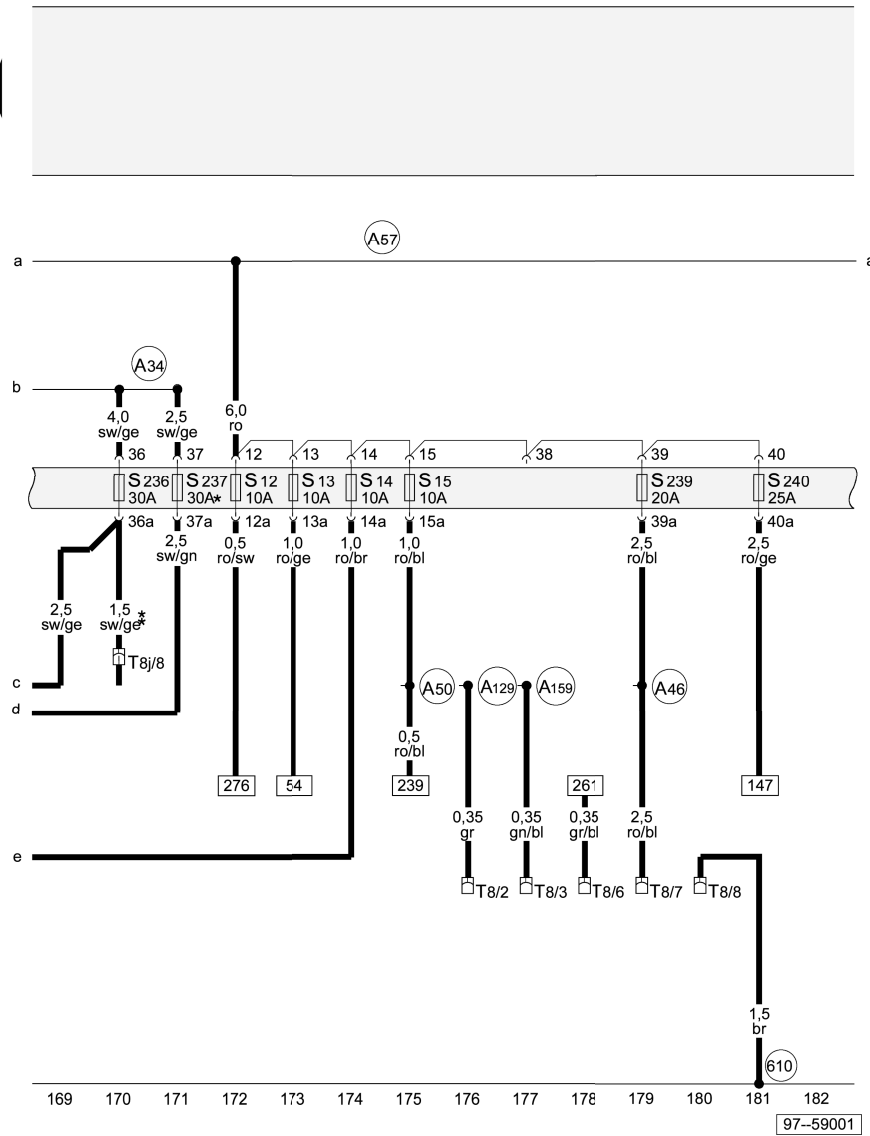

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


Fuses, radio connector III

- S12 - Fuse in fuse box/relay plate
- S13 - Fuse in fuse box/relay plate
- S14 - Fuse in fuse box/relay plate
- S15 - Fuse in fuse box/relay plate
- S236 - Fuse in fuse box
- S237 - Fuse in fuse box (headlight washer system)
- S239 - Fuse in fuse box
- S240 - Fuse in fuse box
- T8 - 8-pin connector, black, radio connector III
- T8j - 8-pin connector, black, behind side trim, rear left
- 610 - Earth point (audio), below centre console, front
- A34 - Connection (75x), in dash panel wiring harness
- A46 - Positive (+) connection (30 - from radio), in dash panel wiring harness
- A50 - Positive (+) connection (30as), in dash panel wiring harness
- A57 - Positive (+) connection -3- (30), in dash panel wiring harness
- A129 - Connection (muting), in dash panel wiring harness
- A159 - Connection (L), in dash panel wiring harness
- * - Fuse rating increased from 25 A to 30 A.
- ** - Avant models - see applicable Current Flow Diagram: Avant models, rear

Audi A4

Current Flow Diagram

No. 42 / 15

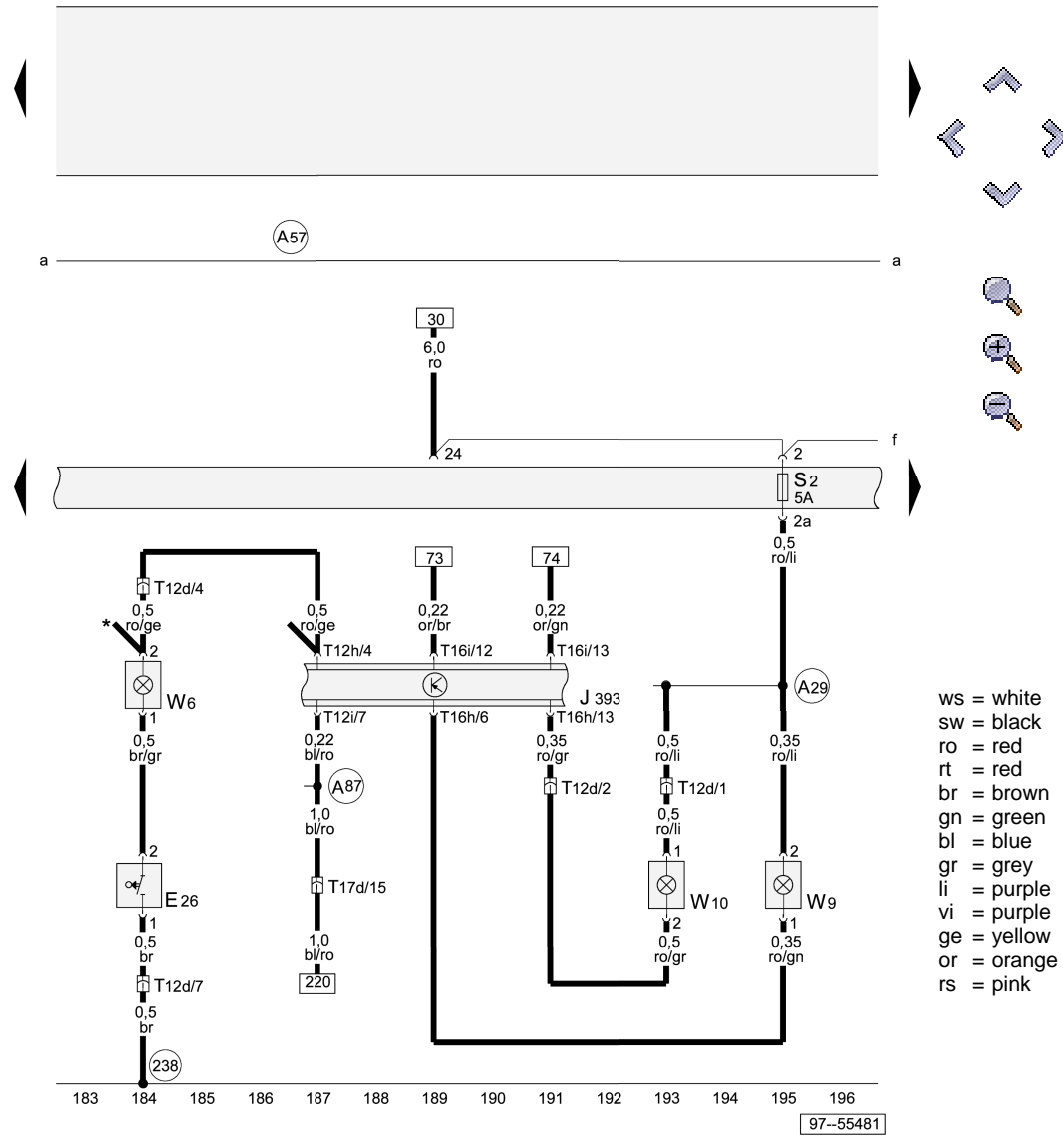

Fuses, glove box light, footwell lights


- E26 - Glove box light switch
- J393 - Convenience system central control unit
- S2 - Fuse in fuse box/relay plate
- T12d - 12-pin connector, brown, near glove box
- T12h - 12-pin connector, black, on convenience system central control unit (used to be connector I)
- T12i - 12-pin connector, black, on convenience system central control unit (used to be connector III)
- T16h - 16-pin connector, black, on convenience system central control unit (used to be connector II)
- T16i - 16-pin connector, brown, on convenience system central control unit (used to be connector V)
- T17d - 17-pin connector, red, connector point, electronics box, plenum chamber
- W6 - Glove box light
- W9 - Left footwell light
- W10 - Right footwell light
- 238 - Earth connection -1-, in interior wiring harness
- A29 - Connection (interior light), in dash panel wiring harness
- A57 - Positive (+) connection -3- (30), in dash panel wiring harness
- A87 - Connection (RF (reversing light)), in dash panel wiring harness
- * - Only applies to models with airbag disabling key switch

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Audi A4

Current Flow Diagram

No. 42 / 16

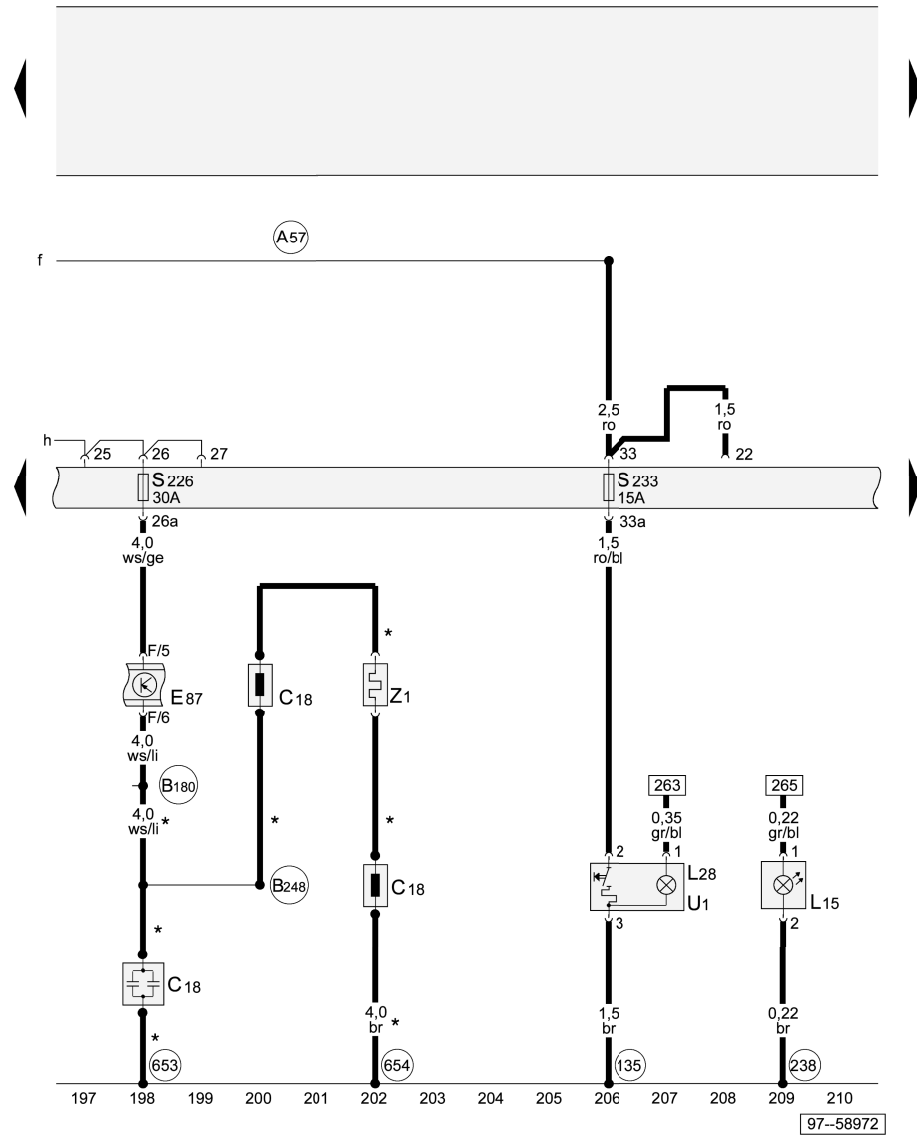

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


Fuses, ashtray illumination, cigarette lighter, heated rear window

- C18 - Window aerial suppression filter
- E87 - Air conditioning system/Climatronic operating and display unit
- L15 - Ashtray light bulb
- L28 - Cigarette lighter light bulb
- S226 - Fuse in fuse box
- S233 - Fuse in fuse box
- U1 - Cigarette lighter
- Z1 - Heated rear window
- 135 - Earth connection -2-, in dash panel wiring harness
- 238 - Earth connection -1-, in interior wiring harness
- 653 - Earth point, left D pillar
- 654 - Earth point, right D pillar
- A57 - Positive (+) connection -3- (30), in dash panel wiring harness
- B180 - Connection (heated rear window), in interior wiring harness
- B248 - Connection -2- (heated rear window), in interior wiring harness
- * - Avant models - see applicable Current Flow Diagram: Avant models, rear

Audi A4

Current Flow Diagram

No. 42 / 17

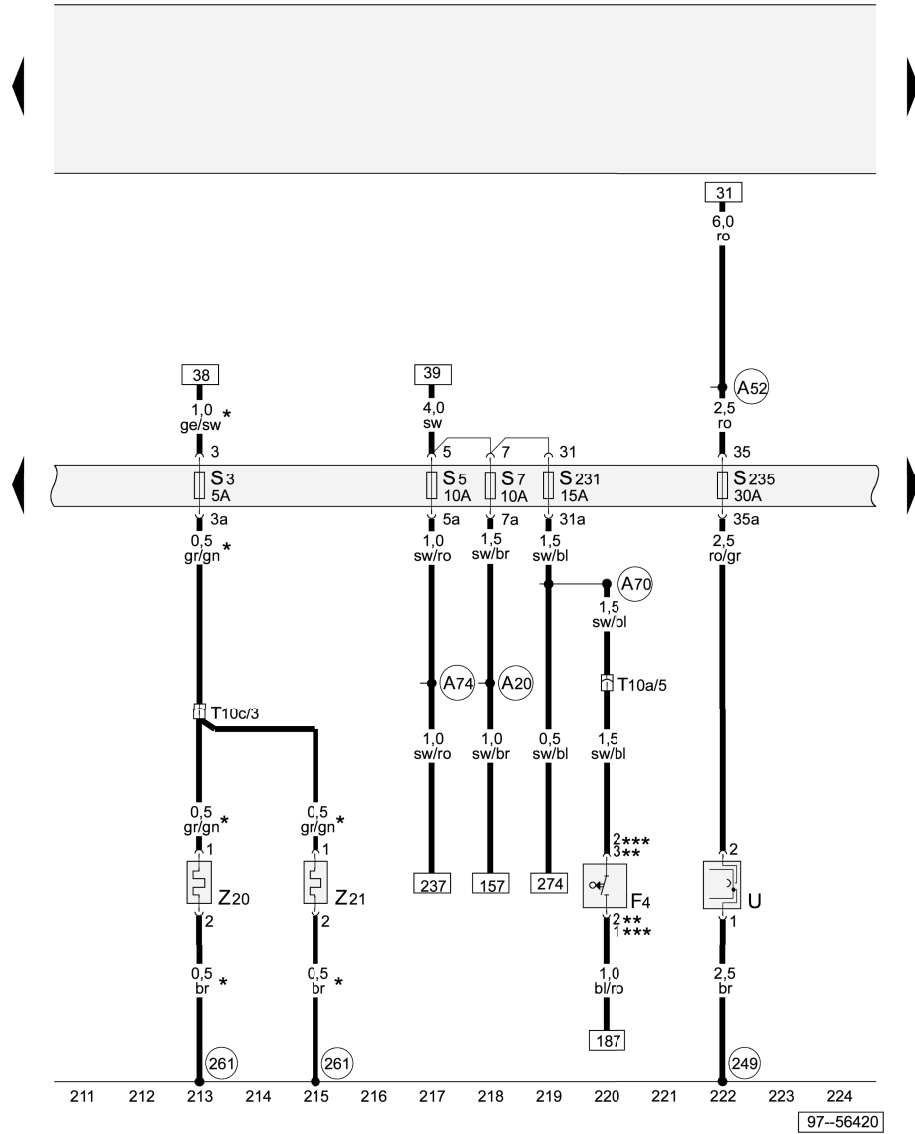

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


Fuses, reversing light switch, socket, heated washer jets

- F4 - Reversing light switch
- S3 - Fuse in fuse box/relay plate
- S5 - Fuse in fuse box/relay plate
- S7 - Fuse in fuse box/relay plate
- S231 - Fuse in fuse box
- S235 - Fuse in fuse box
- T10a - 10-pin connector, brown, connector point, electronics box, plenum chamber
- T10c - 10-pin connector, purple, connector point, A pillar, left
- U - Socket
- Z20 - Heater element, left washer jet
- Z21 - Heater element, right washer jet
- 249 - Earth connection -2-, in interior wiring harness
- 261 - Earth connection, in heated washer jet wiring harness
- A20 - Connection (15a), in dash panel wiring harness
- A52 - Positive (+) connection -2- (30), in dash panel wiring harness
- A70 - Connection (15a, fuse 231), in dash panel wiring harness
- A74 - Connection (15a, fuse 5), in dash panel wiring harness
- * - Only applies to models with heater element for washer jet
- ** - Only applies to models with 5-speed manual gearbox
- *** - Only applies to models with 6-speed manual gearbox

Audi A4

Current Flow Diagram

No. 42 / 18

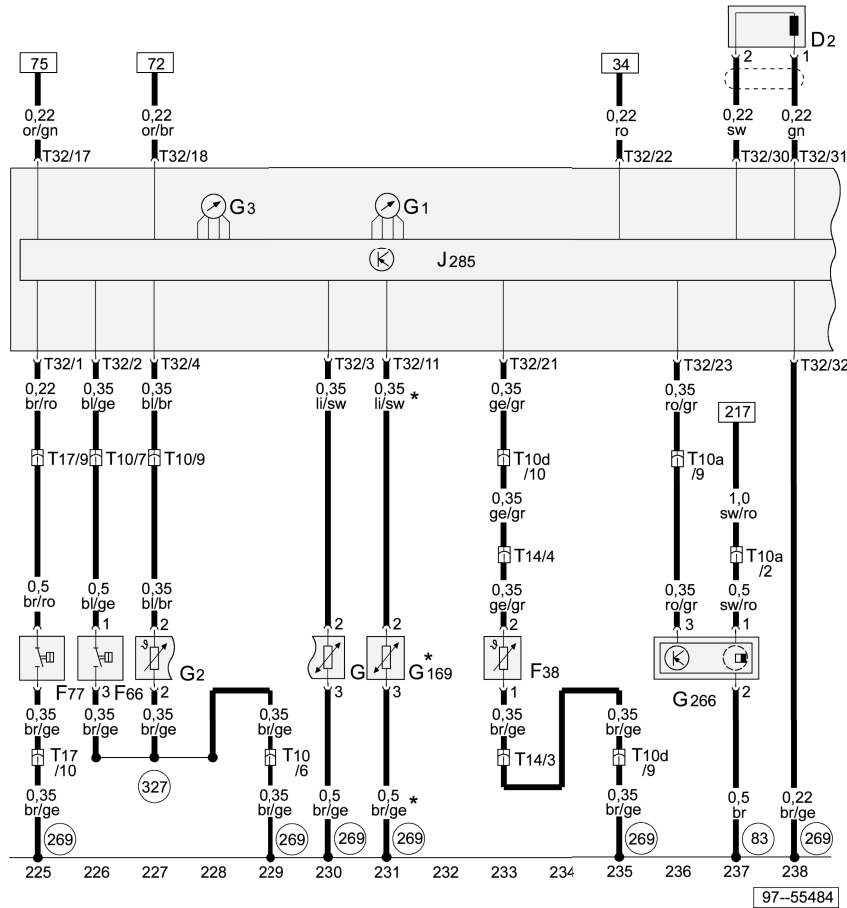

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Fuel gauge sender, ambient temperature switch, oil level/oil temperature sender, coolant temperature sender, coolant shortage indicator switch


- D2 - Immobilizer reading coil
- F38 - Ambient temperature switch
- F66 - Coolant shortage indicator switch
- F77 - Windscreen washer fluid warning contact
- G - Fuel gauge sender
- G1 - Fuel gauge
- G2 - Coolant temperature sender
- G3 - Coolant temperature gauge
- G169 - Fuel gauge sender -2-
- G266 - Oil level/oil temperature sender
- J285 - Control unit with display in dash panel insert

- T10 - 10-pin connector, black, connector point, electronics box, plenum chamber
- T10a - 10-pin connector, brown, connector point, electronics box, plenum chamber
- T10d - 10-pin connector, grey, connector point, A pillar, left
- T14 - 14-pin connector, black, in engine compartment, left
- T17 - 17-pin connector, black, connector point, A pillar, left
- T32 - 32-pin connector, blue, on dash panel insert
- 83 - Earth connection -1-, in front right wiring harness
- 269 - Earth connection (sender earth) -1-, in dash panel wiring harness
- 327 - Earth connection (sender earth), in engine compartment wiring harness
- * - Only models with four-wheel drive

Audi A4

Current Flow Diagram

No. 42 / 19

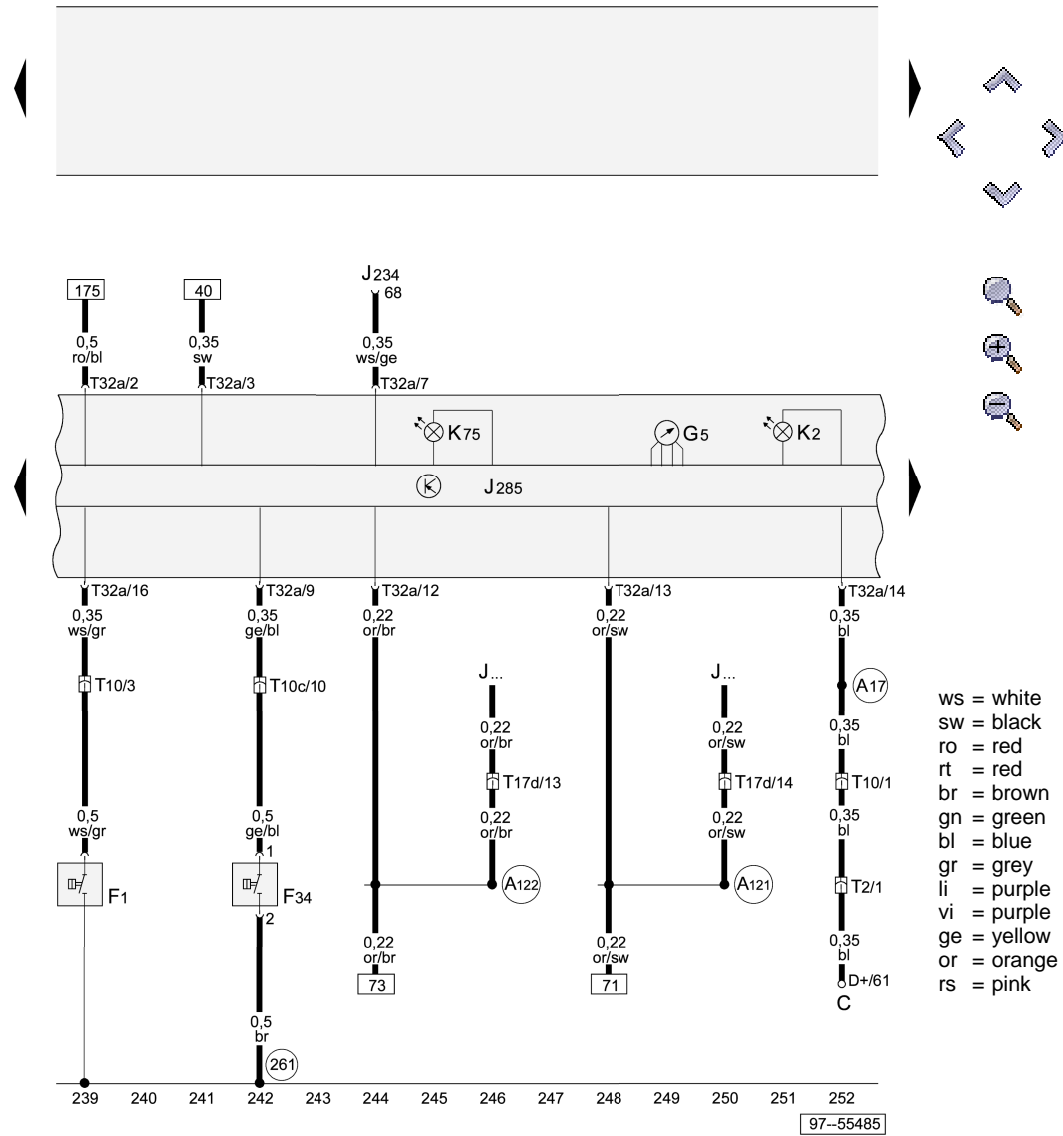

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


Control unit with display in dash panel insert, brake fluid level warning contact, oil pressure switch

- C - Alternator
- F1 - Oil pressure switch
- F34 - Brake fluid level warning contact
- G5 - Rev. counter
- J... - Engine control units
- J234 - Airbag control unit
- J285 - Control unit with display in dash panel insert
- K2 - Alternator warning lamp
- K75 - Airbag warning lamp
- T2 - 2-pin connector, black, engine compartment, right
- T10 - 10-pin connector, black, connector point, electronics box, plenum chamber
- T10c - 10-pin connector, purple, connector point, A pillar, left
- T17d - 17-pin connector, red, connector point, electronics box, plenum chamber
- T32a - 32-pin connector, green, on dash panel insert
- 261 - Earth connection, in heated washer jet wiring harness
- A17 - Connection (61), in dash panel wiring harness
- A121 - Connection (high bus), in dash panel wiring harness
- A122 - Connection (low bus), in dash panel wiring harness

Audi A4

Current Flow Diagram

No. 42 / 20

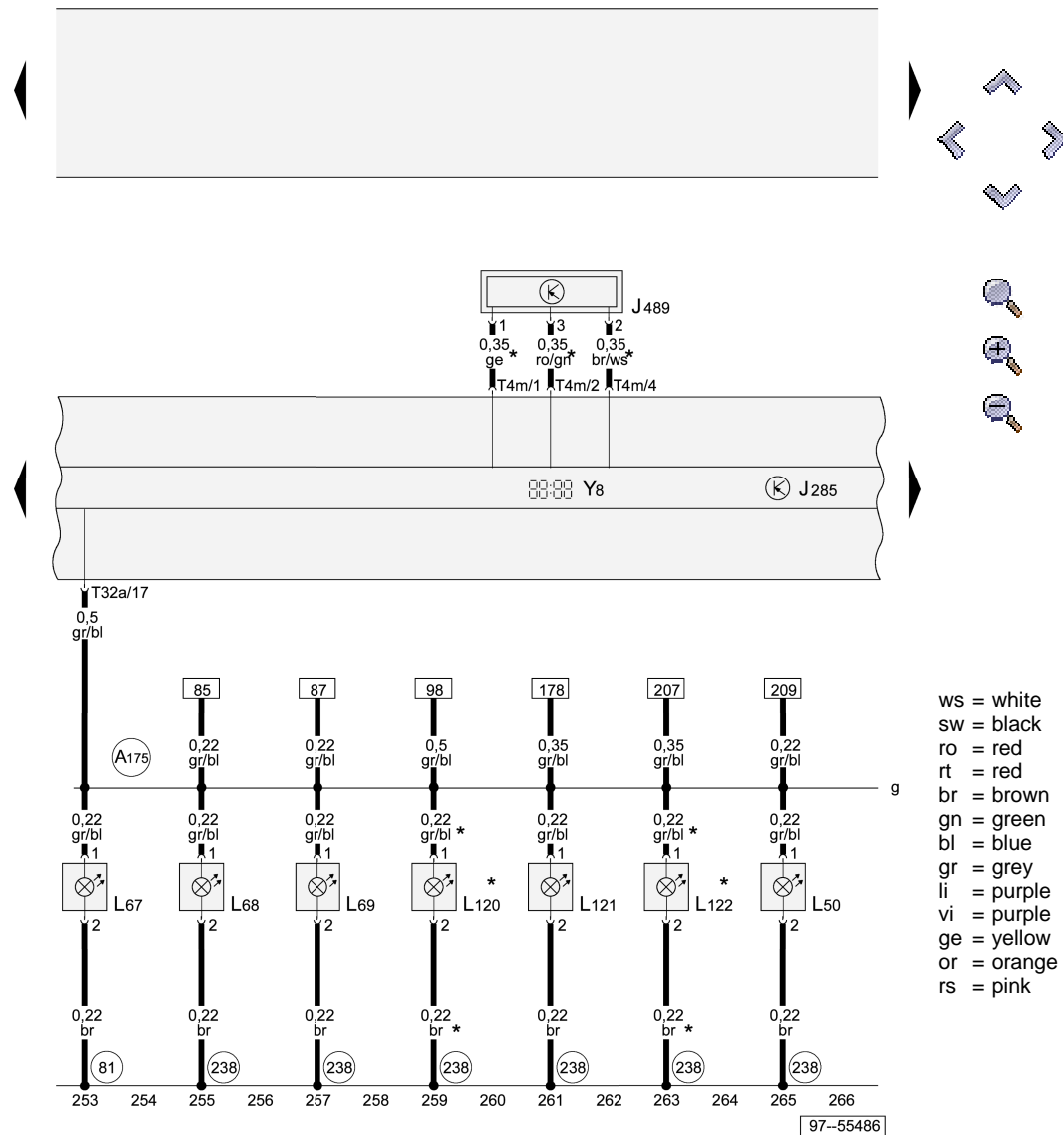

Control unit with display in dash panel insert, illumination for dash panel vents, radio controlled clock


- J285 - Control unit with display in dash panel insert
- J489 - Radio controlled clock receiver
- L50 - Rear centre ashtray light bulb
- L67 - Dash panel left vent illumination
- L68 - Dash panel central vent illumination
- L69 - Dash panel right vent illumination
- L120 - Shelf illumination
- L121 - Cup holder illumination
- L122 - Coin holder illumination
- T4m - 4-pin connector, black, on dash panel insert
- T32a - 32-pin connector, green, on dash panel insert
- Y8 - Radio controlled clock
- 81 - Earth connection -1-, in dash panel wiring harness
- 238 - Earth connection -1-, in interior wiring harness
- A175 - Connection (58s), in dash panel wiring harness
- * - Depending on vehicle equipment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Audi A4

Current Flow Diagram

No. 42 / 21

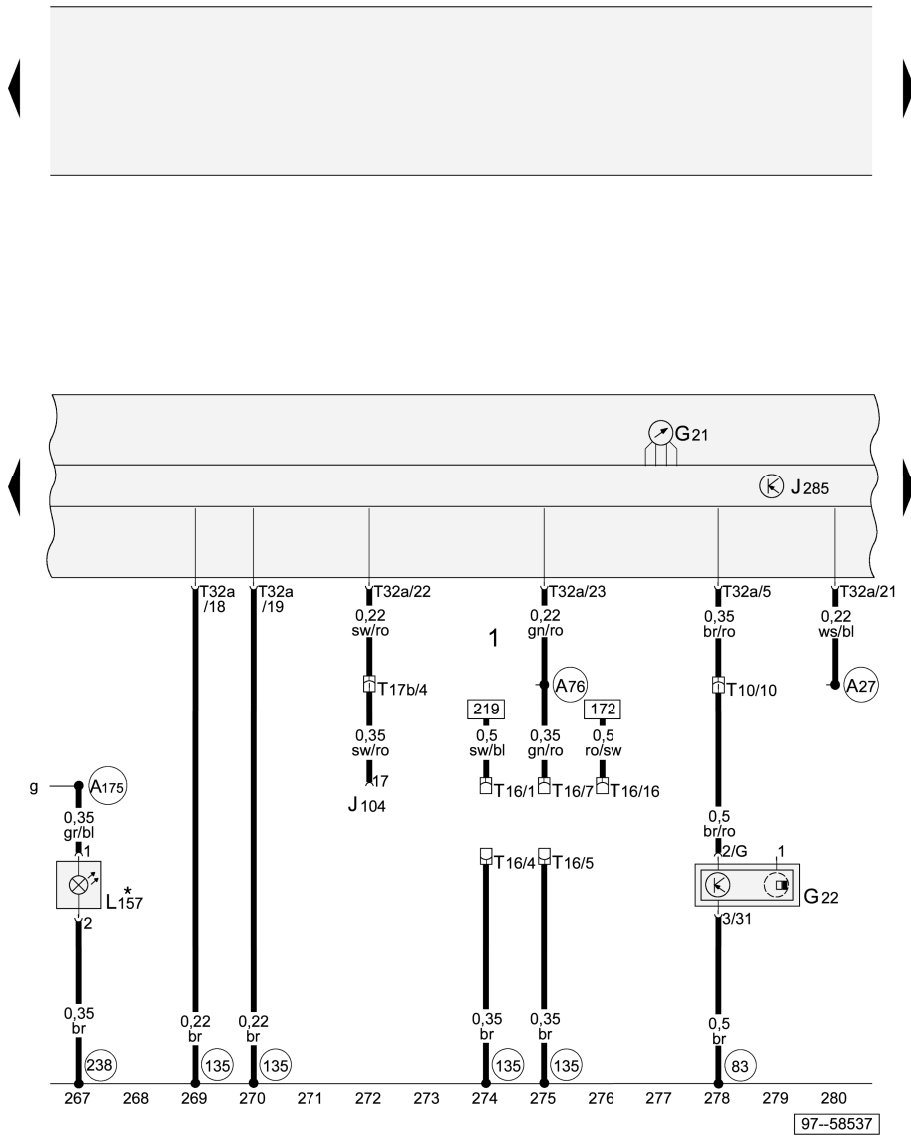

Control unit with display in dash panel insert, diagnostic connector, speedometer sender




- G21 - Speedometer
- G22 - Speedometer sender (Hall sender, on gearbox)
- J104 - ABS with EDL control unit
- J285 - Control unit with display in dash panel insert
- L157 - Centre armrest illumination
- T10 - 10-pin connector, black, connector point, electronics box, plenum chamber
- T16 - 16-pin connector, black, diagnostic connector
- T17b - 17-pin connector, green, connector point, A pillar, left
- T32a - 32-pin connector, green, on dash panel insert
 - 83 - Earth connection -1-, in front right wiring harness
 - 135 - Earth connection -2-, in dash panel wiring harness
 - 238 - Earth connection -1-, in interior wiring harness
- A27 - Connection (speed signal), in dash panel wiring harness
- A76 - Connection (diagnosis wire K), in dash panel wiring harness
- A175 - Connection (58s), in dash panel wiring harness
- * - Depending on vehicle equipment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Audi A4

Current Flow Diagram

No. 42 / 22

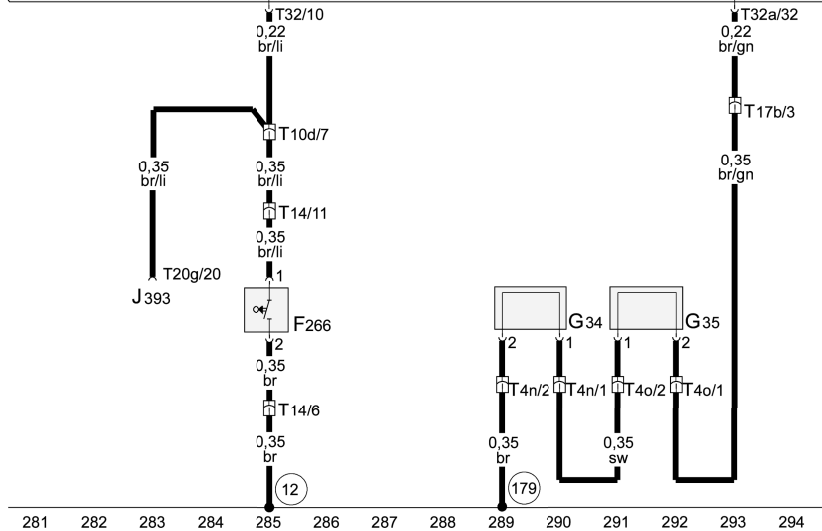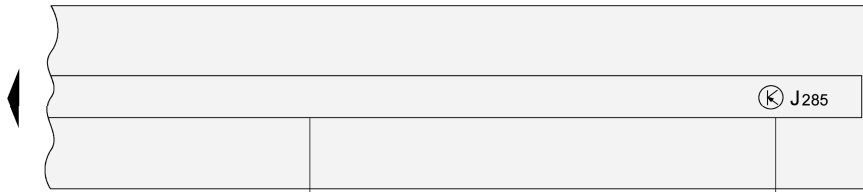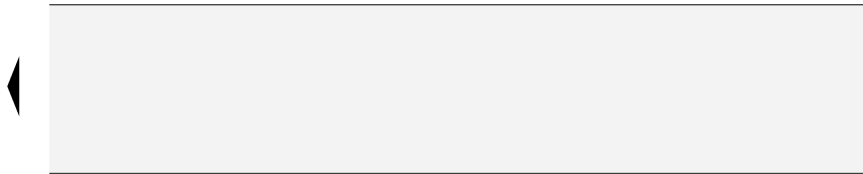

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Control unit with display in dash panel insert, brake lining/pad wear senders, bonnet contact switch

- F266 - Bonnet contact switch
- G34 - Brake lining/pad wear sender, front left
- G35 - Brake lining/pad wear sender, front right
- J285 - Control unit with display in dash panel insert
- J393 - Convenience system central control unit
- T4n - 4-pin connector, black, front left
- T4o - 4-pin connector, black, front right
- T10d - 10-pin connector, grey, connector point, A pillar, left
- T14 - 14-pin connector, black, in engine compartment, left
- T17b - 17-pin connector, green, connector point, A pillar, left
- T20g - 20-pin connector, red, on convenience system central control unit (used to be connector 4)
- T32 - 32-pin connector, blue, on dash panel insert
- T32a - 32-pin connector, green, on dash panel insert
- 12 - Earth point, in engine compartment, left
- 179 - Earth connection, in left headlight wiring harness