

Audi A4

Current Flow Diagram


No. 46 / 1

Edition 09.2003

Driving school vehicles


From model year 2004

Connector point with screw connection

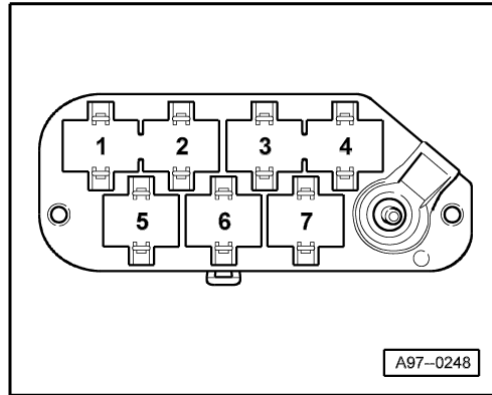


- t In electronics box, plenum chamber
- 1 - 10-pin connector, black (T10)
 - 2 - 10-pin connector, brown (T10a)
 - 3 - 17-pin connector, red (T17d)
 - 6 - 17-pin connector, white (T17e)

4-point relay carrier with screw connection

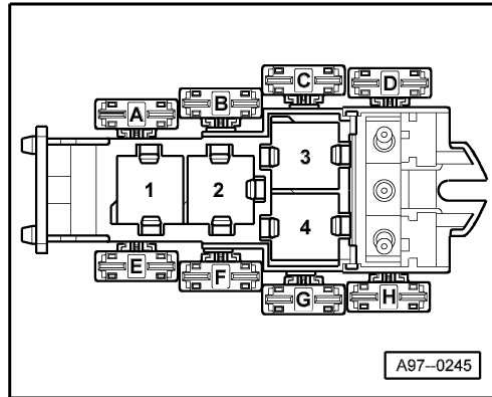


- t Dash panel, driver's side
 - 3 - Engine power reduction relay -1-
 - 4 - Engine power reduction relay -2-
 - F - Fuse, driving school (75x)

9-point relay carrier with onboard power supply control unit

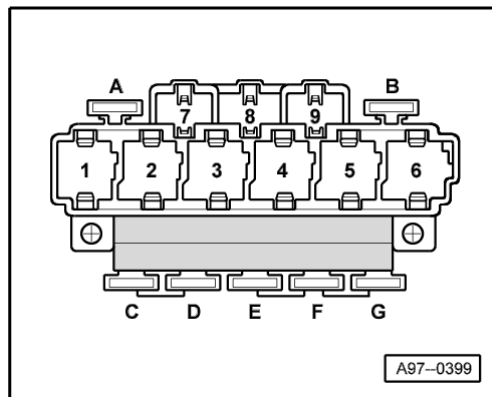

- t Dash panel, driver's side, behind 3-point relay carrier
 - 5 - Special vehicle control unit
 - 6 - X contact relief relay (J59)
 - B - Socket I fuse

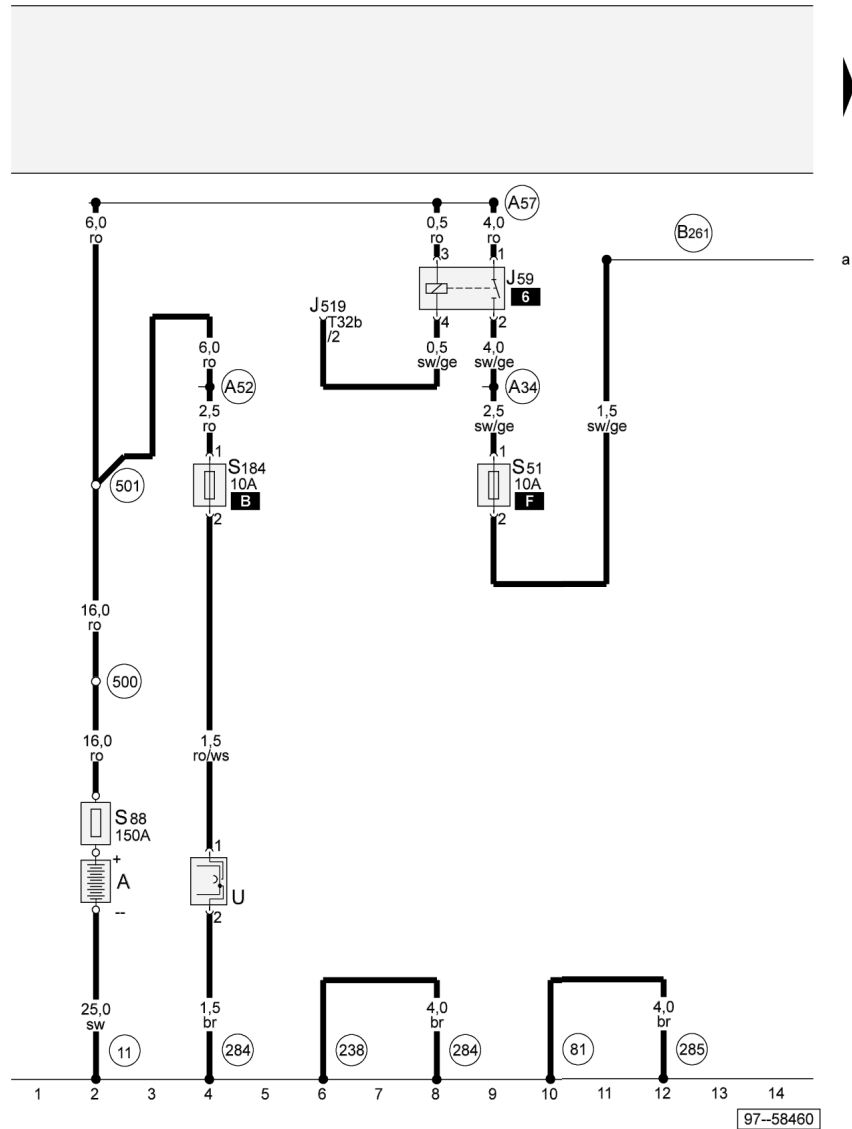


X contact relief relay, fuses, socket

- A - Battery
- J59 - X contact relief relay
- J519 - Onboard power supply control unit
- S51 - Fuse
- S88 - Strip fuse
- S184 - Socket I fuse
- T32b - 32-pin connector, grey, on onboard power supply control unit
- U - Socket
- 11 - Earth point, in battery box
- 81 - Earth connection -1-, in dash panel wiring harness
- 238 - Earth connection -1-, in interior wiring harness
- 284 - Earth connection -6-, in interior wiring harness
- 285 - Earth connection -7-, in interior wiring harness
- 500 - Screw connection -1- (30), on relay plate
- 501 - Screw connection -2- (30), on relay plate
- A34 - Connection (75x), in dash panel wiring harness
- A52 - Positive (+) connection -2- (30), in dash panel wiring harness
- A57 - Positive (+) connection -3- (30), in dash panel wiring harness
- B261 - Positive (+) connection -1- (75x, driving school), in interior wiring harness

Audi A4

Current Flow Diagram

No. 46 / 3

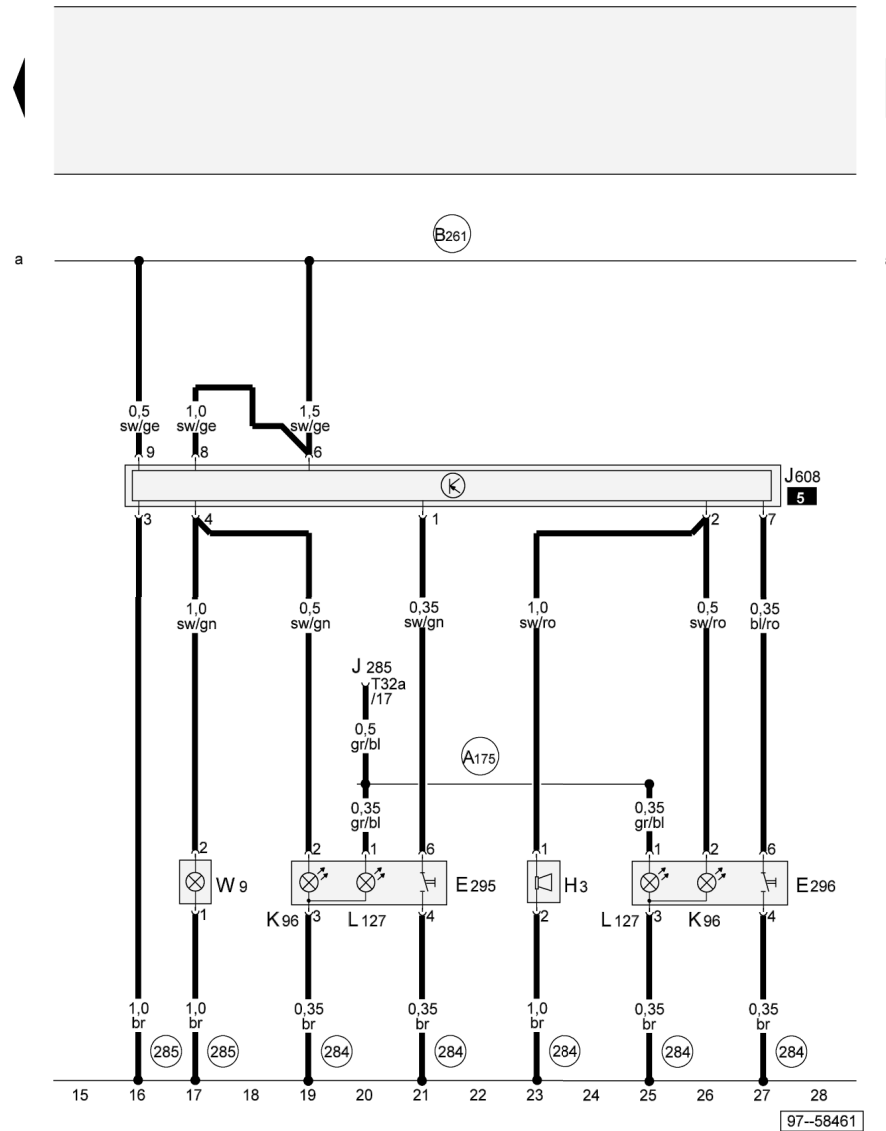

Special vehicle control unit, footwell light switch, warning buzzer switch, left footwell light, buzzer

- E295 - Footwell light switch
- E296 - Warning buzzer switch
- H3 - Buzzer/gong
- J285 - Control unit with display in dash panel insert
- J608 - Special vehicle control unit
- K96 - Warning lamp
- L127 - Electrical installations switch illumination
- T32a - 32-pin connector, green, on dash panel insert
- W9 - Left footwell light
- 284 - Earth connection -6-, in interior wiring harness
- 285 - Earth connection -7-, in interior wiring harness
- A175 - Connection (58s), in dash panel wiring harness
- B261 - Positive (+) connection -1- (75x, driving school), in interior wiring harness




Audi A4

Current Flow Diagram

No. 46 / 4

97-58461

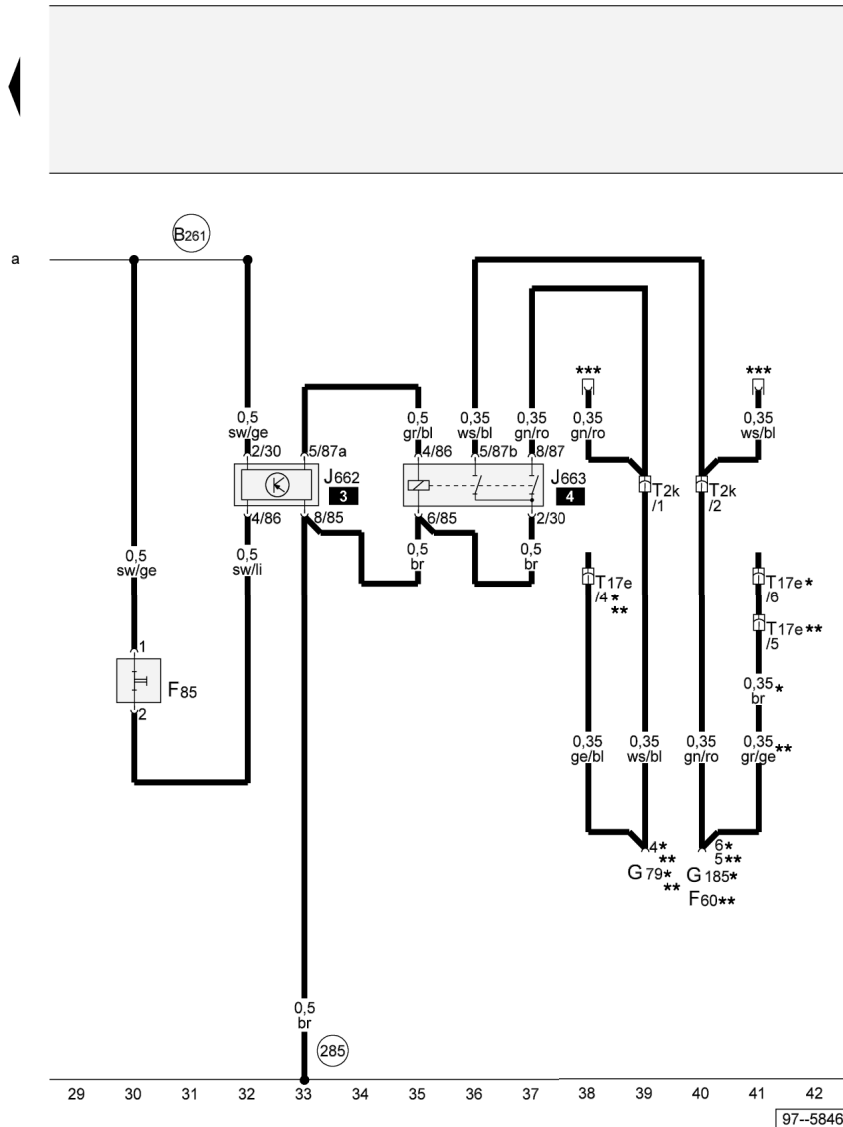

Engine power reduction relay -1-, engine power reduction relay -2-, idling switch, accelerator pedal position sender, accelerator pedal position sender -2-, brake pedal switch for engine off

- F60 - Idling switch
- F85 - Brake pedal switch for engine off
- G79 - Accelerator pedal position sender
- G185 - Accelerator pedal position sender -2-
- J662 - Engine power reduction relay -1-
- J663 - Engine power reduction relay -2-
- T2k - 2-pin connector, black, next to pedal cluster
- T17e - 17-pin connector, white, connector point, electronics box, plenum chamber
- 285 - Earth connection -7-, in interior wiring harness
- B261 - Positive (+) connection -1- (75x, driving school), in interior wiring harness
- * - Only applies to models with petrol engine
- ** - Only applies to models with diesel engine
- *** - Integrated in wiring harness with insulating tape

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink