

Central locking, 5-door vehicles

Removing and installing pump for central locking system

- Remove storage compartment in left side trim.
- → Release cable ties -2-, open noise insulation -1-, disconnect electrical and pneumatic connectors, and remove pump for central locking system.

Important

Once all three connectors have been detached from the central locking system pump make sure that the centre 6-pin connector for the power supply is always re-attached as the last of the three connectors.

- When installing the central locking pump, ensure that the pneumatic connectors engage properly.

