


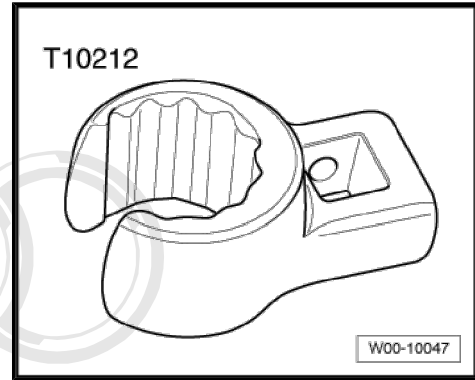

◆ Socket - T10212-



Note

- ◆ *The residual pressure valve may only be renewed if it has been damaged when removing and installing or servicing the suspension strut (air suspension), or if it has become stuck and no longer lets out air.*
- ◆ *If the suspension strut (air suspension) has been removed from the vehicle, no further preparations are needed before renewing the residual pressure valve.*

cial purposes, in part or in whole, is not
oes not guarantee or accept any liability
with respect to the correctness of information in this document. Copyright by AUDI AG.



WARNING


- ◆ *if the residual pressure valve is sticking and does not let out any air, the vehicle must be raised on a lifting platform in order to renew the valve. The wheels must be free.*
- ◆ *When disconnecting the air pipe there is a risk of loosening the residual pressure valve at the same time.*
- ◆ *if the vehicle is not raised on a lifting platform the suspension will immediately drop on the side where the residual pressure valve is slackened. This would cause an acute injury risk, as arms would be trapped.*
- ◆ *The vehicle must remain on the lifting platform until a new residual pressure valve has been installed and the suspension strut (air suspension) has been recharged.*

Removing

This procedure describes the replacement of a residual pressure valve with the suspension strut (air suspension) fitted in the vehicle.

- Put vehicle on lifting platform and raise until wheels are free to turn.
- Clean area around pipe connection.

- Disconnect air supply line and seal off connections.

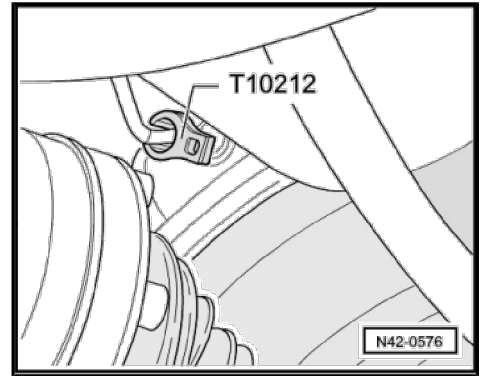


- Unscrew residual pressure valve -1- from suspension strut (air suspension) using socket - T10158/1- -2-.

Installing

Installation is carried out in the reverse sequence.

- Screw in residual pressure valve and tighten to 10 Nm using socket - T10158/1- .
- Charge suspension strut (air suspension) according to instructions in ⇒ Vehicle diagnostic tester ⇒ [page 230](#) .

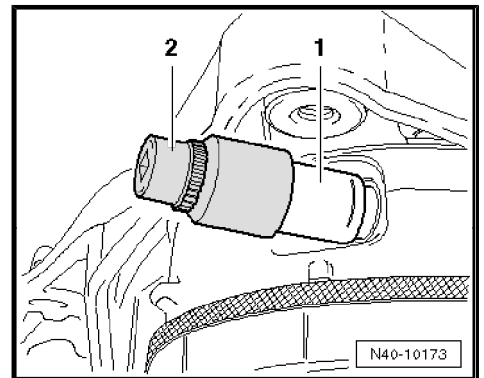

4.9 Removing and installing cross member

Removing

- Remove subframe ⇒ [page 134](#) .
- **Unbolt suspension struts on both sides -arrows- and take off cross member.**

Installing

- Install subframe ⇒ [page 134](#) .
- Attach suspension struts to cross member (60 Nm).

